

LUCAS

Quality

EQUIPMENT

&

SPARE PARTS



1955

AUSTIN

JOSEPH LUCAS LTD · BIRMINGHAM 19 · ENGLAND

Compiled and issued by Technical Records Department, Joseph Lucas Ltd., Great Hampton Street, Birmingham 18

COPYRIGHT.—All rights reserved. No part of this publication may be reproduced without permission

INDEX

Equipment and Spare Part Details for **AUSTIN**

1955 CARS & COMMERCIAL VEHICLES

	Pages		Pages
AMMETERS	26	LAMPS—continued:	
BATTERIES	4-6	REVERSE	21
BULBS	22	REVERSE AND NUMBER PLATE	21
CONTROL AND FUSE BOXES	10	ROOF FLASHER	17
DISTRIBUTORS	8-9	SIDE AND FLASHER	17
EQUIPMENT SPECIFICATIONS	4-6	SIDE	16-17
FLASHER UNIT AND RELAY	26	STOP TAIL	19
GENERATORS	7	STOP TAIL AND NUMBER PLATE	20
HORNS	32	STOP TAIL AND REFLEX	19
HORN PUSH AND RELAY	32	STOP TAIL AND REVERSE	19
IGNITION COILS	8-9	TAIL	21
JUNCTION BOXES	26	TAIL AND NUMBER PLATE	21
LAMPS:		MIRRORS	27
BONNET	17	REFLEX REFLECTORS	22
COURTESY	17	STARTING MOTORS	11
DASH	17	STEERING COLUMN CONTROLS	28-29
DRIVING	18	SUPPRESSORS	4-6 and 9
FOG	18	SWITCHES... ..	30-31
FLASHER, FRONT	17	TERMINAL BLOCK	26
FLASHER, REAR	17	TRAFFICATORS	27
HEAD	12-15	WARNING LIGHTS	22
MAP	17	WINDSHIELD WIPERS	23-25
NUMBER PLATE	20		





EQUIPMENT SPECIFICATIONS

A30 4-door (AS4), 2-door (A2S4), Van (AV4) and 'Countryman' (AP4)

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	GT7A	—	Lamps—continued			Miscellaneous knobs:		
(Alternative)	GLT7A	—	Number plate illumination ...	467-2	53093E	Air strangler	—	325882
Coil, ignition	Q12	45020A	Reflex reflector	RER5	57075B	Starter control	—	325883
Later (Van and 'Countryman')	LA12	45053A	Side	516	52182D	Trafficators	SF80	54044D
Control box	RB106-1	37138D	Stop tail	488	53178E	Windshield wipers:		
Distributor	DM2P4	40299E	Starting motor	M35G-1	25022F	Motor	CRT14	75230A
Fuse box	SF6	033240	Steering column control ...	CC5	32915A	Wheelbox	—	72592K
Generator	C39PV-2	22258D	Switches:			Arm, right hand drive		
Horn	HF1235	069213	Heater fan	PS6	31465A	(2- and 4-door)	—	737628
Lamps:			Ignition	S45	31403B	Arm, right hand drive		
Head			Lighting	CRS3	34092A	(Van and 'Countryman')	—	737762
Home and Export, dip left...	F700	51336A	Panel	PS6	31342A	Arm, left hand drive		
Export, dip right	F700	51337A	Starting motor	ST19-2	76423A	(2- and 4-door)	—	737629
Export Europe (not France)	F700	51339A	Coupling	—	764428	Arm, left hand drive		
Export France	F700EF	51341A	Stop lamp	HL2	31440A	(Van and 'Countryman')	—	737763
			Trafficator	85A	31490A	Blade (2- and 4-door) ...	—	727759
			Windshield wiper	PS6	31345A	Blade (Van and 'Countryman')	—	727803

A40 'Cambridge' 1200 c.c. (GS5) and A50 'Cambridge' 1500 c.c. (HS5)

Battery	GT7A	—	Lamps—continued			Switches—continued		
(Alternative)	GT9A	—	Lens, decorative, front	—	574245	Panel	PS7-2	31419A
Coil, ignition	Q12	45020A	(when trafficators are fitted)			Knob	—	318368
Control box	RB106-1	37138D	Lens, decorative, rear	—	574260	Starting motor	ST19-2	76423A
Distributor (A40 GS5) ...	DM2P4	40452B	(when trafficators are fitted)			Coupling	—	764428
Distributor (A50 HS5) ...	DM2P4	40427D	Number plate illumination ...	L534	53348B	Trafficator	SC82	31464D
Flasher unit	FL3	35003A	Side	516	52182D	Windshield wiper	PS7-2	31419A
Fuse box	SF6	033240	Bracket	—	573635	Knob	—	318369
Generator	C39PV-2	22258D	Base, seating	—	573636	Miscellaneous knobs:		
Horn—High note	HF1748	70071D	Stop tail and reflex	L551	53332B	Starter control	—	326729
Low note	HF1748	70063D	Starting motor	M35G-1	25022F	Choke control	—	326728
High note (later)	WT618	69047A	Steering column control ...	CC3	32919B	Trafficators	SF80	54044D
Low note (later)	WT618	69046A	Switches:			Windshield wipers:		
Lamps:			Dipper	FS22-1	31284A	Motor	DR2	75251A
Flasher, front	539	52213A	Flasher	SC82	31530A	Wheelbox	—	72665A
Flasher, rear	538	53333A	Heater fan	PS7-2	31419A	Arm, right hand drive	—	741294
Head			Knob	—	318370	Arm, left hand drive ...	—	741295
Home and Export, dip left...	F700	51515F	Lighting and ignition ...	PRS3	31516A	Blade	—	738734
Export, dip right	F700	51516H	Knob	—	316449			
Export Europe (not France)	F700	51517F						
Export France	F700EF	51518F						

A40 Van (GV5), Pick-up Truck (GQU5) and 'Countryman' (GP5)

Battery	GT7A	—	Lamps, Head—continued			Switches—continued		
Bulb holder, panel light	PL37	39013A	Export, dip right	F700	51345D	Lighting and ignition ...	PRS3	31270A
(Van and Pick-up Truck) ...	PL37	39013A	Export Europe (not France)	F700	51346B	Knob	—	316285
Coil, ignition	Q12	45020A	Export France	F700EF	51411A	Panel	PS6	31342A
Control box	RB106-1	37138D	Reflex reflector	RER5	57052A	Starting motor	ST19-2	76423A
Distributor	DM2P4	40452B	Side	489	52139B	Coupling	—	764428
Fuse box	SF6	033240	Stop tail and number plate			Windshield wiper	PS6	31345A
Generator	C39PV-2	22258D	illumination	ST51	53060A	Trafficators	SF80	54045D
Horn (Van and Pick-up Truck)...	HF1235	069213	Starting motor	M35G-1	25022F	Windshield wipers:		
Horn, low note ('Countryman')	WT614	69011J	Steering column control ...	CC3	32853F	Motor	CRT14	75145A
Horn, high note ('Countryman')	WT614	69012J	Switches:			Wheelbox	—	72662A
Lamps:			Dipper	FS22-1	31372A	Arm, right hand drive	—	737444
Head			Heater fan	PS7-1	31201D	Arm, left hand drive ...	—	737445
Home and Export, dip left...	F700	51344B	Knob	—	316224	Blade	—	727802

A70 'Hereford' Saloon (BS3), 'Countryman' (BW4) and Pick-up Truck (BK3)

Ammeter	CZU55	36140A	Lamps—continued			Switches—continued		
Battery	GT11A	—	Number plate illumination			Solenoid operating	SS8	31115A
Coil, ignition	B12-1	45012B	('Countryman' BW4 and			Knob	—	317332
Control box	RB106-1	37139E	Pick-up Truck BK3) ...	467-2	53101E	Windshield wiper	PS16	31113A
Distributor	DM2P4	40295E	Reflex reflector	RER5	57052A	Knob	—	316478
Fuse box	SF6	033240	Side	516	52182D	Choke control knob ...	—	325744
Generator	C45PV-5	22483A	Stop tail	488	53178E	Terminal block	TB6	37101B
Horn—High note	WT614	69012J	Mirror	583-92A	62043A	Trafficators (Saloon BS3)	SF80	54044D
Low note	WT614	69011J	Starting motor	M418G	25521D	Trafficators ('Countryman'		
Horn relay	SB40-1	33135B	Steering column control ...	CC2	32854J	and Pick-up Truck BK3)	SF80	54045D
Lamps:			Switches:			Warning lights:		
Head			Dipper	FS22-1	31372A	Ignition	—	304994
Home and Export, dip left ...	F700	51336A	Heater fan	PS7-1	31201D	Main beam	—	318874
Export, dip right	F700	51337A	Knob	—	316224	Bulb holder	—	39020B
Export Europe (not France)	F700	51339A	Lighting and ignition ...	PRS2	31194D	Windshield wipers:		
Export France	F700EF	51341A	Knob	—	316286	Motor	CRT14	75150A
Number plate illumination			Panel	PS16	31113A	Wheelbox	—	72592K
(Saloon BS3)	467-2	53093E	Knob	—	316478	Arm, right hand drive	—	737529
			Solenoid, starting motor ...	ST950	76411E	Arm, left hand drive ...	—	737581
						Blade	—	738724

A90 'Westminster' (BS4)

Battery	GT9A	—	Lamps, Head—continued			Switches—continued		
Coil ignition	B12-1	45012B	Export Europe (not France)	F700	51517F	Panel	PS7-2	31498A
(Later)	HA12	45054A	Export France	F700EF	51518F	Knob	—	318368
Control box	RB106-1	37139E	Lens, decorative, front ...	—	574245	Solenoid, starting motor	ST950	76411E
(Later)	RB106-2	37183A	(when trafficators are fitted)			Solenoid operating	SS9	31510A
Distributor	DM6	40442A	Lens, decorative, rear ...	—	574260	Knob	—	317375
(Special orders)	DM6	40470A	(when trafficators are fitted)			Trafficator	SC82	31464D
Flasher unit	FL3	35003A	Number plate illumination ...	L534	53348B	Windshield wiper	PS7-2	31498A
Fuse box	SF6	033240	Side	516	52214E	Knob	—	318369
Generator	C45PV-5	22483A	Stop tail and reflex	L551	53332B	Miscellaneous knobs:		
Horn—High note	WT618	69047A	Starting motor	M418G	25521D	Choke control	—	326728
Low note	WT618	69046A	Steering column control ...	CC3	32946D	Trafficators	SF80	54044D
Lamps:			Switches:			Windshield wipers:		
Flasher, front	539	52213A	Dipper	FS22-1	31284A	Motor	DR2	75251A
Flasher, rear	538	53333A	Flasher	SC82	31530A	Wheelbox	—	72665A
Head			Heater fan	PS7-2	31498A	Arm, right hand drive	—	745080
Home and Export, dip left...	F700	51515F	Knob	—	318370	Arm, left hand drive ...	—	745081
Export, dip right	F700	51516H	Lighting and ignition ...	PRS3	31516A	Blade	—	738734
			Knob	—	316449			

EQUIPMENT SPECIFICATIONS



Healey '100'

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery	SLG11E	—	Lamps, Head—continued			Switches—continued		
Coil, ignition	B12-1	45012B	Export Europe (not France)	F700	51339A	Overdrive control	2TS	31452A
Control box	RB106-1	37139E	Export France	F700EF	51341A	Panel	10P	31140A
Distributor	DM2P4	40320B	Reflex reflector	RER5	57052A	Solenoid, starting motor	ST950	76411E
Flasher unit	FL3	35003A	Side	488	52162B	Solenoid operating	SS5	31318A
Flasher relay	DB10	33117A	Stop tail	488	53178E	Transmission gear solenoid	TGS1	76505A
Fuse box	SF6	033240	Starting motor	M418G	25521D	Rotary throttle	RTS1	31402A
Generator	C45PV-5	22483A	Steering column control	CCI	32918A	Windshield wiper	PS7-2	31431A
Horn—High note	HF1748	70071D	Switches:			Knob	—	317530
Low note	HF1748	70063D	Battery master	ST330	76605B	Trafficators	SF80	54044D
Lamps:			Centrifugal, overdrive	OCSI	76108A	Warning light, ignition	—	39020A
Driving	SLR576	55132B	Dipper	FS22-1	31372A	Windshield wipers:		
Fog	SFT575	55128B	Interrupter, overdrive	SS10-1	31077E	Motor	CRT15	75144A
Head			Heater fan	—	78261B	Wheelbox	—	72629D
Home and Export, dip left... ..	F700	51336A	Knob	—	768473	Arm, right hand drive	—	737570
Export, dip right	F700	51337A	Ignition	S45	31403B	Arm, left hand drive	—	737571
Export U.S.A.	F700	51509A	Lighting	PPG1	31432A	Blade	—	73872A
			Knob	—	316129			

'Princess' long wheel base Saloon (DS6) and Limousine (DM4), short wheel base Saloon (DS5) and Touring Limousine (DM5)

Ammeter	CZU55	36185A	Lamps—continued			Switches—continued		
Battery	SLT15E	—	Map reading	PIL	39006A	Reading lamp	PS16	31113A
Coil, ignition	B12-1	45012B	Number plate illumination	296	53100A	Knob	—	316512
Control box	RB106-1	37139E	Reverse (later)	464	53128E	Reverse lamp	SS10-1	31077E
Distributor	DM2P4	40147H	Stop tail and reflex (later)	L551	53384B	Solenoid, starting motor	ST950	76411E
Flasher unit	FL3	35003A	Stop tail and reflex	464	53202A	Solenoid operating	SS8	31115A
Flasher relay	DB10	33117A	Mirror (long wheel base models)	573	62047A	Knob	—	316512
Fuse box	SF6	033240	Mirror (short wheel base models)	573A	62060A	Stop lamp	54C	31281B
Generator	C45PV-5	22483A	Panel light adaptor	PL34	39010A	Spring, left hand drive	—	315726
Horn—High note	WT29	69022A	Starting motor	M45G	26043A	Spring, right hand drive	—	315723
Low note	WT29	69021A	Steering column control	CC2	32747N	Windshield wiper	PRS5	31302D
Horn relay	SB40-1	33116B	(Left hand drive)	CC2	32776K	Knob	—	316510
Junction box	6J	78266B	Switches:			Knob, air strangler	—	32672A
Lamps:			Dipper	FS22-1	31372A	Terminal block	TB6	37101B
Bonnet	PIL	39006A	Fog	PPG2	31114E	Warning light, holder	—	30499A
Courtesy (long wheel base models)	489	52139B	Knob	—	316512	Warning light, main beam	WL4	31853A
Fog	SFT700S	55055D	Heater, dash	PS16	31113A	Windshield wipers:		
Flasher, front	L539	52256A	Knob	—	316512	Motor	DR1	75188F
Home and Export, dip left... ..	PF770	51054A	Heater, under seat (DM4 Limousine)	CHRI	78203B	Wheelbox	—	72647B
Home, non-dip	PF770	51055A	Lighting and ignition	CHRI	31194D	Arm, right hand drive:		
Export, dip right	PF770	A51054A	Knob	—	316511	Passenger side	—	741295
Export Europe (not France)	PF770	B51054A	Map reading light	PS7-1	31201D	Driver's side	—	741294
Export France	PF770EF	51056A	Knob	—	318382	Arm, left hand drive:		
			Panel	CHRI	78238B	Passenger side	—	741294
			Knob	—	316509	Driver's side	—	741680
						Blade	—	741680

Ambulance (DAI) and Hearse (DHI)

Ammeter	BM11	36053B	Lamps—continued			Switches—continued		
Battery	STXT19E	—	Reverse and number plate illumination (Ambulance)	476	53116A	Reading lamp	PS16	31113A
Bulbholder, reading and panel light	PL34	39010A	Side	S463	52112A	Knob	—	31510A
Coil, ignition	B12-1	45012B	Stop tail and number plate illumination (Ambulance)	476	53117A	Reverse lamp	SS10-1	31077E
Control box	RF95-2	37076E	Stop tail and reflex	464	53198B	Solenoid, starting motor	ST950	76411E
Distributor	DM6	40308D	Mirror	575-85	62015A	Solenoid operating	SS8	31115A
Generator	C45PV-5	22483A	Starting motor	M45G	26043A	Knob	—	317308
Horn—High note	WT29	69022A	Steering column control	CC2	32837F	Stop lamp	54C	31281B
Low note	WT29	69021A	(Left hand drive)	CC2	32838F	Spring, left hand drive (Ambulance)	—	315726
Lamps:			Switches:			Spring, right hand drive	—	315723
Fog	FT58	55044A	Dipper	FS22-1	31372A	Terminal block	TB6	37101B
Head			P100	50532A	8	Trafficators	SF40N	54041A
Home, dip left	P100	50532A	Door pillar	8	359216	Warning lights:		
Home, non-dip	P100	50533A	Heater fan	PS16	31113A	Bulb Holder (Ambulance)	—	39020A
Export, dip left and dip right	P100	50502A	Knob	—	315104	Ignition and main beam	WL4	31853A
Export U.S.A.	P100	50773B	Ignition	S45	31287A	Windshield wipers:		
Export Europe (not France)	P100	50502A	Interior light	PS9	31275A	Motor	CRT11	75151A
Export France	P100EF	50820A	Lighting	PPG2	31114E	Wheelbox	—	72662A
Map reading	PIL	39006A	Knob	—	315206	Control box	—	72606A
Number plate illumination: (Ambulance)	296	53100A	Panel	PS16	31113A	Arm	—	737481
Number plate illumination: (Hearse)	474	53109A	Knob	—	315104	Blade	—	737482

Taxi (FX3) Petrol and (BMC) 2.2 litre Diesel and Hire Car (FL1) Petrol and (BMC) 2.2 litre Diesel

Ammeter	CZU20	36137B	Lamps—continued			Switches—continued		
Battery (Petrol)	SLT15E	—	Number plate illumination	467-2	53101E	Panel	PS7-1	31201D
Battery (Diesel)	MT19E	—	Side (Taxi)	LD109	52105A	Knob	—	314026
Coil, ignition (Petrol)	Q12	45020A	Side (Hire Car)	LD109A	52040A	Solenoid, starting motor	ST950	76411E
Control box	RF95-2	37076E	Stop tail	488	53178E	Solenoid operating	SS5	31071A
Distributor (Petrol)	DM2P4	40321F	Stop tail and number plate illumination	ST51	53060A	Stop lamp	54C	31281B
Flasher unit	FL3	35007A	Mirror (Hire Car)	160-UMB2	62012B	Spring	—	315726
Flasher relay	SF4	37137A	Starting motor (Petrol)	M418G	25521D	Windshield wiper (Taxi)	PS7-1	31201D
Fuse box (Diesel, later)	SF5-2	37209A	Starting motor (Diesel)	M45G	26116A	Knob	—	316243
Generator	C45PV-5	22483A	Steering column control: (Taxi)	CC1	32709F	Trafficators	SF34N	54039A
Horn—High note (Hire Car)	WT614	69012J	(Hire Car)	CC1	32709F	Warning light, ignition	WL3-1	38013B
Low note (Hire Car)	WT614	69011J	(Hire Car, left hand drive)	CC1	32817J	Windshield wipers:		
Horn (Taxi)	WT614	69040A	Switches:			Motor (Taxi)	CRT12	75150A
Junction box	4J	78264B	Dipper (Taxi)	FS22	31372A	Motor (Hire Car)	CRT16	75150A
Lamps:			Fog	PS7-1	31201D	Wheelbox (Taxi)	—	72632A
Fog	SFT575	55029E	Knob	—	314403	Wheelbox (Hire Car) with switch	—	72560K
Flasher, roof	559	53411A	Lighting and ignition or main	PLC6	34002D	Wheelbox (Hire car) less switch	—	72603E
Head						Control box (Hire Car)	—	72602A
Home, dip left	ML143	51644A				Arm	—	735072
Home, non-dip	ML143	51645A				Blade	—	727803

'Champ' Civilian

Ammeter	CZU34	36099F	Lamps, Head—continued			Switches—continued		
Battery	GT11A	—	Export, dip right	F700	51469A	Panel	PS6	31342A
Coil, ignition	B12-1	45012B	Export Europe (not France)	F700	51470A	Starting motor	ST19-2	76423A
Control box	RB106-1	37139E	Export France	F700EF	51471A	Coupling	—	764428
Distributor	DM2P4	40386A	Number plate illumination	467-2	53101E	Miscellaneous knobs:		
Fuse box	SF6	033240	Reflex reflector	RER3	57044A	Starter control	—	325883
Generator	C45PV-5	22483A	Side	LD109	52105A	Choke control	—	325882
Horn	HF1235	069213	Stop tail	488	53178E	Warning light holder	—	30499A
Horn push and dipper switch	HD77	31325A	Starting motor	M45G	26061A	Windshield wipers:		
Junction box	4J	78264B	Switches:			Motor	CW1	75198A
Lamps:			Lighting and ignition	PRS3	31270A	Arm	—	735055
Head			Knob	—	316285	Blade	—	727802
Home and Export, dip left... ..	F700	51468A						



EQUIPMENT SPECIFICATIONS

Coach (CXB) Series II

UNIT	Model	Part No.	UNIT	Model	Part No.	UNIT	Model	Part No.
Battery (Petrol)	STWD17E	—	Lamps:			Switches:		
Battery (Diesel)	LMXBW717E	—	Head			Lighting and ignition or main	PRS3	31270A
Coil, ignition (Petrol)	Q12	45020A	Home and Export, dip left...	F700	51344B	Knob	—	316285
Coil, ignition (Later)	LA12	45053A	Export, dip right	F700	51345D	Panel	PS6	31276A
Control box	C.A.V.	—	Export Europe (not France)	F700	51346B	Solenoid, starting motor	ST950	76411E
Distributor (Petrol)	DM6	40327B	Export France	F700EF	51411A	Solenoid operating	SS5	31071A
Fuse box	SF4	37137A	Side	LD109	52105A	Stop lamp	54C	31281B
Fuse box (Diesel, later)	C.A.V.	—	Stop tail and number plate			Spring	—	315746
Generator	C.A.V.	—	illumination	ST38C	53063A	Windshield wipers:		
Horn	HF1235	069213	Starting motor (Petrol)	M45G	26043A	Motor	CWI	75130A
Horn push and dipper switch	HD77	31324A	Starting motor (Diesel)	C.A.V.	—	Arm	—	735055
Junction box	4J	78264B				Blade	—	727802

1 and 1½ ton Van

Battery	GT11A	—	Lamps—continued			Switches—continued		
Bulb holder, panel	PL31	39007A	Number plate illumination	467-2	53101E	Stop lamp	HL2	31082D
Coil, ignition	Q12	45020A	Reflex reflector	RER5	57052A	Windshield wiper	PS7-2	31434B
Control box	RB106-1	37138D	Side	L539	52274A	Knob	—	316388
Distributor	DM2P4	40321F	Stop tail	488	53178E	Suppressor	WS5	78106A
Fuse box	SF6	033239	Starting motor	M45G	26043A	Warning light, ignition	WL3-1	38049A
Generator	C39PV-2	22258D	Switches:			Windshield wipers:		
Horn	HF1235	069213	Lighting and ignition	PRS3	31270A	Motor	CRT15	75146A
Horn push and dipper switch	I7	31442A	Knob	—	312813	Wheelbox	—	72624A
Junction box	2J	78265B	Starting motor	ST19-2	76423A	Arm	—	736411
Lamps:			Coupling	—	764428	Blade	—	741680
Head								
Home, dip left	F700	51515F						

1½ ton 4×4 Cargo Truck (Civilian)

Ammeter	CZU34	36099F	Lamps:			Switches—continued		
Battery	GT11A	—	Head			Lighting and ignition	PRS3	31270A
Bulb holder, panel	PL34	39020A	Home and Export, dip left...	F700	51344B	Knob (Lighting)	—	316285
Coil, ignition	B12-1	45012B	Number plate illumination	467-2	53101E	Knob (Ignition)	—	316434
Control box	RB106S-1	37166D	Reflex reflector (Red)	RER3	57044A	Panel	PS6	31432A
Distributor	DM6	40308D	Reflex reflector (Amber)	RER3	57045A	Solenoid, starting motor	ST950	76411E
Fuse box	SF6	033240	Side	LD109	52105A	Solenoid operating	SS5	31071A
Generator	C45PV-5	22470H	Stop tail	488	53178E	Suppressor (Ignition)	WS6	78110A
Horn	HF1748	069448	Starting motor	M45G	26043A	Suppressor (Wiper)	WS10	78117A
Horn push and dipper switch	HD77	31324A	Switches:			Warning light, holder	—	304994
Inspection sockets	—	38605A	Convoy light	PS6	31276A	Bulb	—	987
Junction box	4J	78264B	Heater fan	CHRI	78239A	Windshield wipers:		
			Knob	—	768473	Motor	CWI	75168A
						Arm	—	735096
						Blade	—	727802


2 and 5 ton Petrol Tanker

Ammeter	CZU34	36099F	Lamps—continued			Switches—continued		
Battery	GT11A	—	Reflex reflector (Red)	RER3	57044A	Heater fan	CHRI	78239A
Coil, ignition	Q12	45021A	Reflex reflector (Amber)	RER3	57045A	Knob	—	768473
Control box	RF95-2	37065E	Side	L-S-O	52034A	Lighting and ignition	PRS3	31270A
Distributor	DUH6A	40339E	Stop tail	AT202	53437A	Knob	—	316285
Fuse box	C.A.V.	—	Tail (alternative)	AT202	53436A	Solenoid, starting motor	ST950	76422D
Generator	C45PV-5	22461B	Tail and number plate			Solenoid operating	SS5	31071A
Horn	HF1235	069213	illumination	AT201L	53041B	Stop lamp	54C	31281B
Horn push	HP19L	76205A	Tail and number plate			Spring	—	315746
Junction box	4J	78264B	illumination (later)	AT202	53417A	Warning light, holder	—	304994
Lamps:			Starting motor	M45G	26066A	Windshield wipers:		
Dash	D20-2	63000A	Switches:			Motor	CWI	75130A
Head			Master battery	C.A.V.	—	Arm	—	735096
Home and Export, dip left...	F700	51258B	Dipper	MS6	31336A	Blade	—	727802
Export, dip right	F700	51259B						

2 and 3 ton Truck Series II (Petrol and BMC Diesel) and 5 ton Truck Series II (Petrol and Perkins P6 Diesel)

Ammeter	CZU34	36099F	Horn	HF1235	069213	Switches:		
Battery (Petrol)	GT11A	—	Horn push and dipper switch	HD77	31324A	Heater fan	CHRI	78239A
Battery (2 and 3 ton Diesel)	MT19E	—	Lamps:			Knob	—	768473
Battery (5 ton Diesel)	LMXBW717E	—	Head			Lighting and ignition or main	PRS3	31270A
Coil, ignition (Petrol)	Q12	45020A	Home and Export, dip left...	F700	51344B	Knob	—	316285
Coil, ignition (Petrol, later)	LA12	45053A	Export, dip right	F700	51345D	Solenoid, starting motor	ST950	76411E
Coil, ignition (Petrol, high speed)	B12-1	45012B	Export Europe (not France)	F700	51346B	Solenoid operating	SS5	31071A
Control box (2 and 3 ton Diesel)	RB106-1	37138D	Export France	F700EF	51411A	Starting motor (5 ton Diesel)	C.A.V.	—
Control box (2 and 3 ton Petrol and 5 ton Petrol and Diesel)	RB106-1	37139E	Number plate illumination	467-2	53101E	Stop lamp	54C	31281B
Distributor (Petrol)	DM6	40307E	Reflex reflector (Red)	RER3	57044A	Spring	—	315746
Distributor (Petrol, high speed)	DM6	40308D	Reflex reflector (Amber)	RER3	57045A	Warning light, holder	—	304994
Fuse box	SF6	033240	Side	LD109A	52105A	Windshield wipers:		
Generator (2 and 3 ton Petrol and 5 ton Petrol and Diesel)	C45PV-5	22483A	Stop tail	488	53178E	Motor	CWI	75130A
Generator (2 and 3 ton Diesel)	C39PV-2	22258D	Mirror	540	62521A	Arm	—	735096
			Starting motor (Petrol)	M45G	26043A	Blade	—	727802
			Starting motor (2 and 3 ton Diesel)	M45G	26109D			
			Starting motor (5 ton Diesel)	C.A.V.	—			

GENERATORS

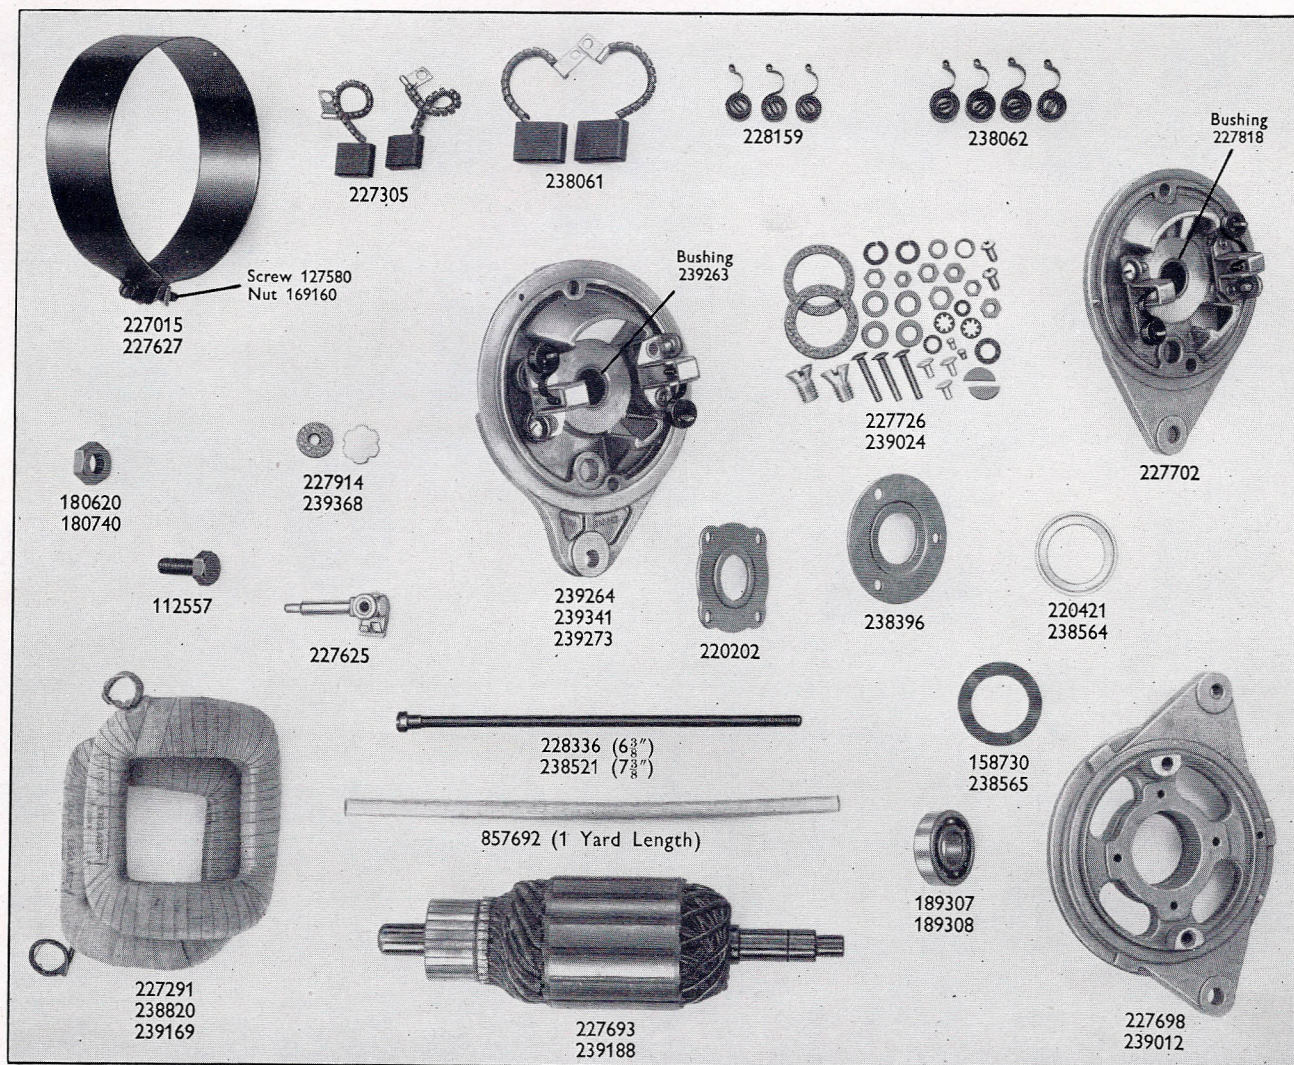


GENERATORS	A30, A40 and A50 (all models), 1 and 1½ ton Vans and 2 and 3 ton B.M.C. Diesel Trucks	A70, A90, Austin-Healey '100', 'Princess' (all models), Ambulance, Hearse, Hire Car, Taxi, 'Champ' (Civilian) and 2, 3 and 5 ton Trucks (Petrol)	1½ ton 4×4 'Cargo' Truck	2 and 5 ton Petrol Tanker
Part No.	22258D	22483A	22470H	22461B
Model	C39PV-2	C45PV-5	C45PV-5	C45PV-5
Type	L-0	L-0	BN215	BN193
Detailed Parts				
§Cover band	227627	227015	227015	227015
Screw, cover band fixing	127580	127580	127580	127580
Nut, cover band fixing screw	169160	169160	169160	169160
§Brushes, set	227305	238061	238061	238061
§Bracket or frame, commutator end	227702	239264	239341	239273
Bushing, bearing	227818	239263	239263	239263
Oiler	227914	239368	239368	239368
Springs, set, brush tension	228159	238062	238062	238062
§Bearing	189307	189308	189308	189308
§Bracket or frame, drive end	227698	239012	239012	239012
Plate, bearing	220202	238396	238396	238396
Washer, dished	220421	238564	238564	238564
Washer, corrugated	158730	238565	238565	238565
Bolt, lug	112557	112557	112557	112557
§Nut, shaft	180740	180620	180620	180620
§Armature	227693	239188	239188	239188
§Field coils	227291	238820	238820	239169
§Terminal assembly	227625	227625	227625	239087
Insulating tube (1 yard)	857692	857692	857692	857692
§Bolt, through	228336	238521	238521	238521
§Sundry parts, set	227726	239024	239024	239024

§ Recommended spares for stock.




DISTRIBUTORS AND IGNITION COILS

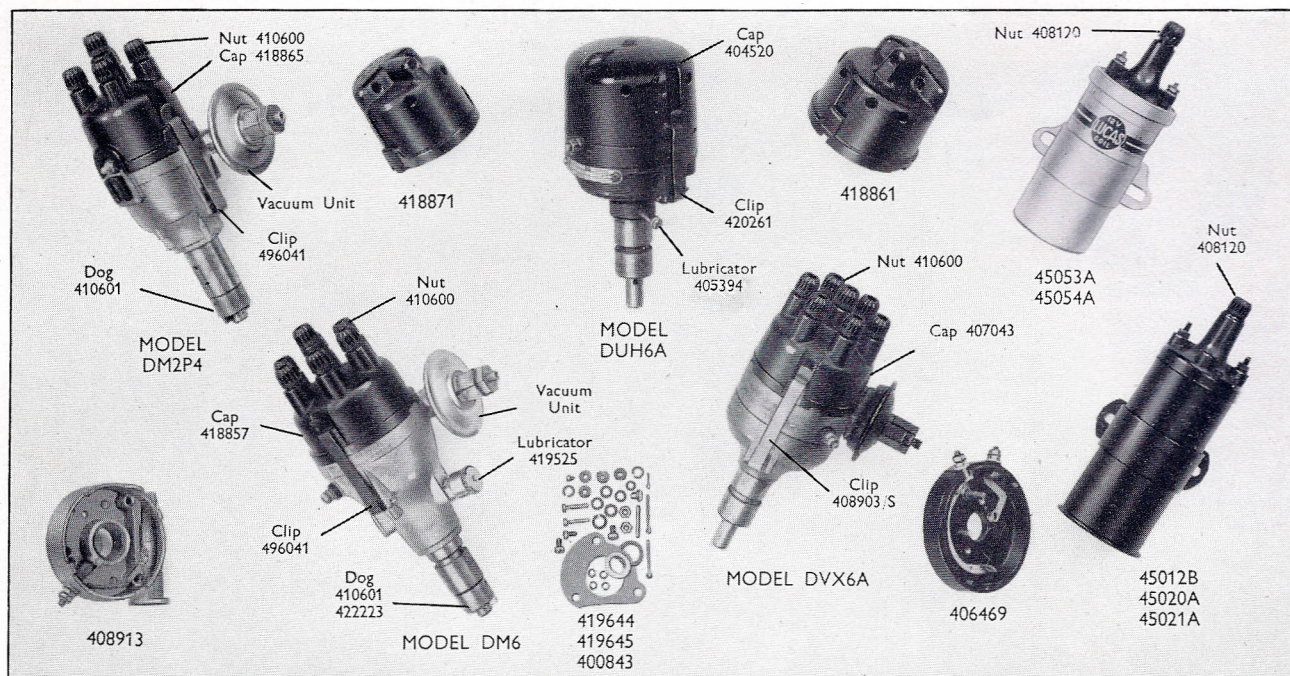

DISTRIBUTORS AND IGNITION COILS	A30 Models	A40 Models	A50 Models	A70 Models	A90 'Westminster' (BS4)		Healey '100'
Part No.	40299E	40452B	40427D	40295E	40442A	40470A	40320B
Model	DM2P4	DM2P4	DM2P4	DM2P4	DM6	DM6	DM2P4
Type	BN214	BN	BN240	BN208	A209	A209-I	BN216
Detailed Parts						Special Orders	
§Clamping plate ...	421191	421191	421191	421191	421191	421191	421191
Screw, clamping ...	415087	415087	415087	415087	415087	415087	415087
Nut, micrometer adjusting ...	—	—	—	—	—	—	—
Details set, micrometer ...	—	—	—	—	—	—	—
Bracket, vacuum unit ...	—	—	—	—	—	—	—
Actuating lever ...	—	—	—	—	—	—	—
Cap ...	418871	418871	418871	418865	418861	418861	418865
Nut, knurled ...	—	—	—	410600	—	—	410600
Brush and spring ...	418856	418856	418856	418856	418856	418856	418856
Rotor arm ...	400051	400051	400051	400051	418726	418726	400051
Contact set ...	420196	420196	420196	420196	420197	420197	420196
Condenser ...	420302	420302	420302	420302	421487	421487	420302
Plate, contact breaker base ...	418650	418650	418650	418650	419980	419980	418650
Plate, contact breaker bearing ...	420178	420178	420178	420178	420375	420375	420178
Spring, star ...	496043	496043	496043	496043	496058	496058	496043
Circlip, base fixing ...	496042	496042	496042	496042	496059	496059	496042
§Terminal pin ...	419882	419882	419882	419882	407019	407019	419882
Bush, insulating (L.T. terminal)...	—	—	—	—	408927	408927	—
Insulating piece (L.T. terminal)...	418623	418623	418623	418623	405319	405319	418623
Bush, insulating ...	418933	418933	418933	418933	419950	419950	418933
Insulating piece ...	418935	418935	418935	418935	—	—	418935
Lead, low tension connector ...	418946	418946	418946	418946	419021	419021	418946
Lead, earth ...	418664	418664	418664	418664	419023	419023	418664
Housing, micrometer ...	—	—	—	—	—	—	—
Terminal details, housing ...	—	—	—	—	—	—	—
§Cam ...	496076	496076	496076	496076	496074	496074	496076
§Springs, set, auto-advance ...	416146/S	421386/S	422243/S	408382/S	421851	416055/S	416155/S
Toggle ...	418707	419149	418707	418707	418707	418707	418707
Weight assembly ...	418321	418321	418321	418321	418321	418321	418321
§Shaft and action plate ...	421153	421629	421153	419669	421321	418330	419668
Nut, knurled, vacuum adjusting...	419087	419087	419087	419087	419087	419087	419087
Spring, ratchet ...	421825	421825	421825	421825	421825	421825	421825
Spring, return ...	419086	419086	419086	419086	419086	419086	419086
Vacuum unit ...	419832	420278	420537	419738	419786	419681	420006
Bearing ...	—	—	—	—	—	—	—
Bushing ...	419430	419430	419430	419430	—	—	419430
Clip, cap retaining ...	496041	496041	496041	496041	496041	496041	496041
Lubricator ...	—	—	—	—	419525	419525	—
Dog, driving ...	410601	410601	410601	—	422223	410601	—
§Sundry parts, set...	419644	419644	419644	419644	419645	419645	419644
§COIL, IGNITION							
Part No.	45020A	45020A	45020A	45012B	45012B	—	45012B
Model	Q12	Q12	Q12	B12-I	B12-I	—	B12-I
Part No. (later fitment)...	45053A	—	—	—	45054A	—	—
Model	LA12	—	—	—	HA12	—	—
§Nut, moulded ...	408120	408120	408120	408120	408120	—	408120
Washer, split, cable end...	185015	185015	185015	185015	185015	—	185015
Nut, switch and contact breaker terminals ...	166043	166043	166043	166043	166043	—	166043
Washer, shakeproof ...	188330	188330	188330	188330	188330	—	188330
Washer, plain ...	131023	131023	131023	131023	131023	—	131023

§ Recommended spares for stock.

DISTRIBUTORS AND IGNITION COILS

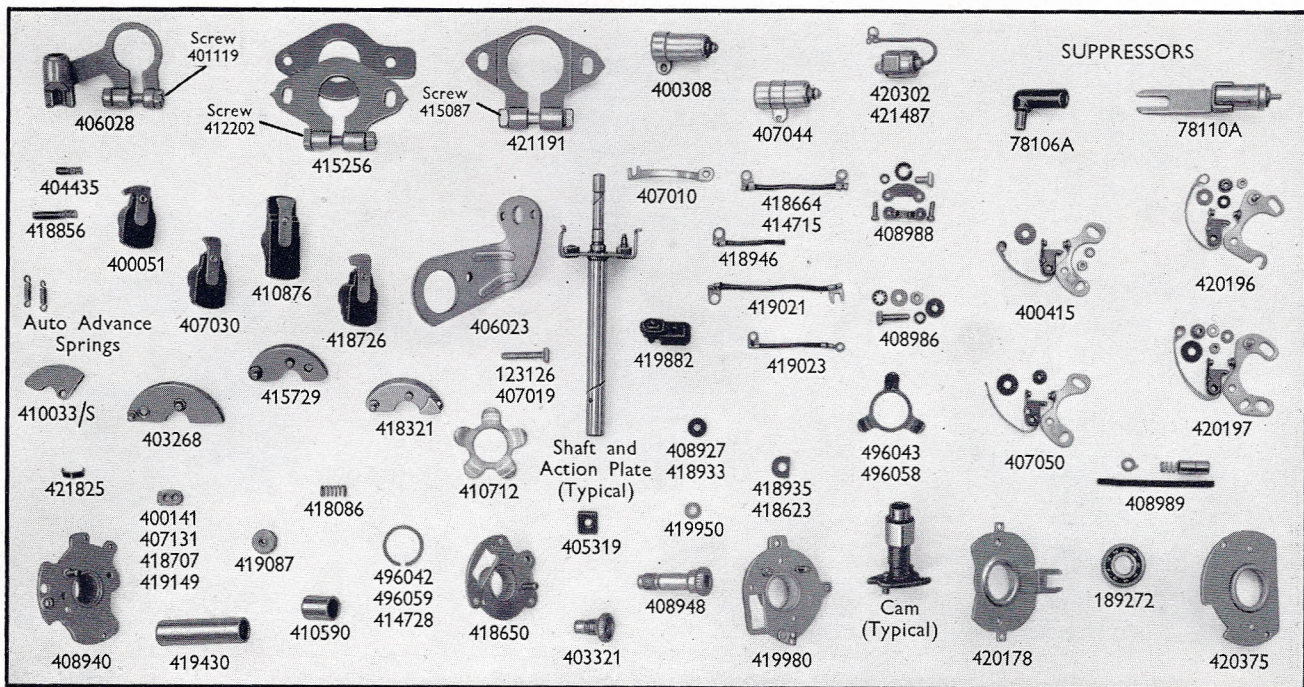

DISTRIBUTORS AND IGNITION COILS	'Princess' (All models)	Ambulance, Hearse, 4 x 4 Truck and 2, 3 and 5 ton Trucks (High speed)	Hire Car, Taxi and 1 and 1½ ton Vans	'Champ' (Civilian)	Coach (CXB) Series II	2 and 5 ton Petrol Tanker	2, 3 and 5 ton Trucks (Petrol)
Part No.	40147H	40308D	40321F	40386A	40327B	40339E	40307E
Model	DVX6A	DM6	DM2P4	DM2P4	DM6	DUH6A	DM6
Type	BN186	BN215	BN180	BN216-I	BN219	BN223	BN192
Detailed Parts							
§ Clamping plate ...	415256	421191	421191	421191	421191	—	421191
§ Screw, clamping ...	412202	415087	415087	415087	415087	401119	415087
§ Nut, micrometer adjusting ...	408948	—	—	—	—	403321	—
§ Details set, micrometer ...	408989	—	—	—	—	408989	—
§ Bracket, vacuum unit ...	—	—	—	—	—	406023	—
§ Actuating lever ...	—	—	—	—	—	406028	—
§ Cap ...	407043	418861	418865	418865	418861	404520	418857
§ Nut, knurled ...	410600	—	410600	410600	—	—	410600
§ Brush and spring ...	404435	418856	418856	418856	418856	404435	418856
§ Rotor arm ...	407030	418726	400051	400051	418726	410876	418726
§ Contact set ...	407050	420197	420196	420196	420197	400415	420197
§ Condenser ...	407044	421487	420302	420302	421487	403308	421487
§ Plate, contact breaker base ...	408940	419980	418650	418650	419980	*406469	419980
§ Plate, contact breaker bearing ...	—	420375	420178	420178	420375	—	420375
§ Spring, star ...	410712	496058	496043	496043	496058	—	496058
§ Circlip, base fixing ...	414728	496059	496042	496042	496059	—	496059
§ Terminal pin ...	408988	407019	419882	419882	407019	123120	407019
§ Bush, insulating (L.T. terminal) ...	—	408927	—	—	408927	—	408927
§ Insulating piece (L.T. terminal) ...	—	405319	418623	418623	405319	—	405319
§ Bush, insulating ...	—	419950	418933	418933	419950	—	419950
§ Insulating piece ...	—	418935	418935	418935	418935	—	418935
§ Lead, low tension connector ...	407010	419021	418946	418946	419021	—	419021
§ Lead, earth ...	414715	419023	418664	418664	419023	—	419023
§ Housing, micrometer ...	408913	—	—	—	—	—	—
§ Terminal details, housing ...	408986	—	—	—	—	—	—
§ Cam ...	408999	496074	496078	496076	496074	419947	496074
§ Springs, set, auto-advance ...	405396/S	416151/S	416168/S	416126/S	409631/S	489686/S	409631/S
§ Toggle ...	407131	418707	—	418707	418707	400141	418707
§ Weight assembly ...	415729	418321	410033/S	418321	418321	403268	418321
§ Shaft and action plate ...	420191	419913	419689	419668	419892	404888	419892
§ Nut, knurled, vacuum adjusting ...	—	419087	419087	419087	419087	—	419087
§ Spring, ratchet ...	—	421825	421825	421825	421825	—	421825
§ Spring, return ...	—	419086	419086	419086	419086	—	419086
§ Vacuum unit ...	419067	419923	420278	419254	419890	417499	419890
§ Bearing ...	189272	—	—	—	—	—	—
§ Bushing ...	410590	—	419430	419430	—	410590	—
§ Clip, cap retaining ...	408903/S	496041	496041	496041	496041	420261	496041
§ Lubricator ...	—	419525	—	—	419525	405394	419525
§ Dog, driving ...	410601	410601	—	—	410601	410601	410601
§ Sundry parts, set ...	400843	419645	419644	419644	419645	400843	419645
§ COIL, IGNITION							
Part No.	45012B	45012B	45020A	45012B	45020A	45021A	45020A
Model ...	B12-I	B12-I	Q12	B12-I	Q12	Q12	Q12
Part No. (later fitment) ...	—	—	—	—	45053A	—	45053A
Model ...	—	—	—	—	LA12	—	LA12
§ Nut, moulded ...	408120	408120	408120	408120	408120	408120	408120
§ Washer, split, cable end ...	185015	185015	185015	185015	185015	185015	185015
§ Nut, switch and contact breaker terminals ...	166043	166043	166043	166043	166043	166043	166043
§ Washer, shakeproof ...	188330	188330	188330	188330	188330	188330	188330
§ Washer, plain ...	131023	131023	131023	131023	131023	131023	131023


* Base.

† Terminal.

§ Recommended spares for stock.



CONTROL AND FUSE BOXES

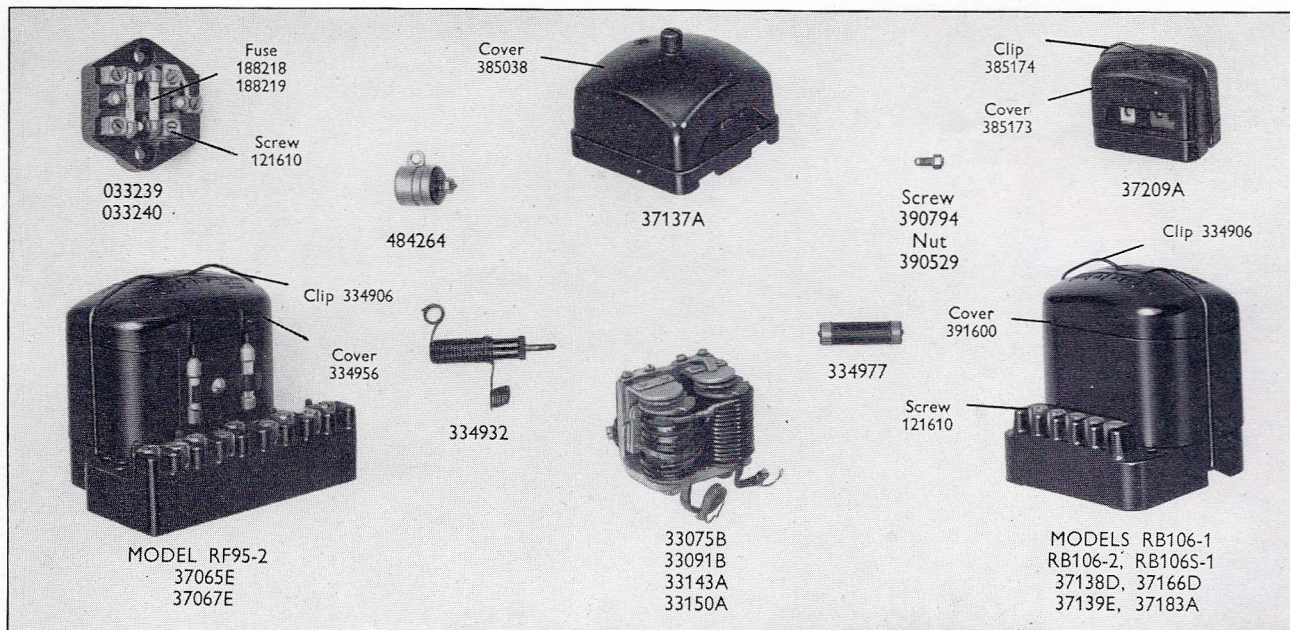


CONTROL BOXES	A30, A40, A50, 1 and 1½ ton Vans and 2 and 3 ton Trucks Series II (Diesel)	A70 and 'Princess' (all models), A90 'Westminster', Austin-Healey '100', 'Champ' (Civilian), 2 and 3 ton Trucks Series II (Petrol) and 5 ton Truck Series II (Petrol and Diesel)	A90 'Westminster' (later)	Ambulance (DAI), Hearse (DHI), Hire Car (FLI) and Taxi (FX3, Petrol and Diesel)	1½ ton 4x4 'Cargo' Truck	2 and 5 ton Petrol Tanker
Part No.	37138D	37139E	37183A	37076E	37166D	37065E
Model	RB106-1	RB106-1	RB106-2	RF95-2	RB106S-1	RF95-2
Detailed Parts						
§Cover	391600	391600	391600	334956	391600	334956
§Clip, cover fixing	334906	334906	334906	334906	334906	334906
§Regulator	33143A	33150A	—	33091B	33150A	33075B
Screw, regulator fixing ..	101545	101545	—	101545	101545	101545
§Washer, spring	185038	185038	—	185038	185038	185038
§Resistance	334977	334977	334977	334977	334977	334977
§Screw, terminal	121610	121610	121610	121610	121610	121610
Condenser and clip	—	—	—	—	484264	—
Screw, condenser fixing ...	—	—	—	—	101545	—
§Washer, condenser fixing screw	—	—	—	—	185038	—
§Choke assembly	—	—	—	—	334932	—
§Nut, 5 B.A., choke fixing ...	—	—	—	—	166130	—
Washer, 5 B.A., plain	—	—	—	—	131000	—
§Washer, 5 B.A., spring	—	—	—	—	185012	—
Fuse, 35 amp.	—	—	—	188218	—	188218
Screw, adjusting ..	390794	390794	390794	390794	390794	390794
Nut, adjusting screw	390529	390529	390529	390529	390529	390529

FUSE BOXES	A30, A40, A50, A70 and 'Princess' (all models), A90 'Westminster', Austin-Healey '100', 'Champ' (Civilian), 'Cargo' Truck and 2, 3 and 5 ton Trucks Series II (Petrol and Diesel)	Hire Car (FLI) and Taxi (FX3) (Diesel — later)	Hire Car (FLI), Taxi (FX3) and Coach (CXB) Series II	1 and 1½ ton Vans
Part No.	033240	37209A	37137A	033239
Model	SF6	SF5-2	SF4	SF6
Detailed Parts				
§Fuse, 60 amp.	—	188222	—	—
§Fuse, 35 amp.	188218	—	—	188218
§Fuse, 50 amp.	188219	—	—	—
§Fuse, 25 amp.	—	—	188216	—
§Screw, terminal	121610	121610	121610	121610
§Cover	—	385173	385038	—
§Clip, cover fixing	—	385174	—	—

§ Recommended spares for stock.

STARTING MOTORS

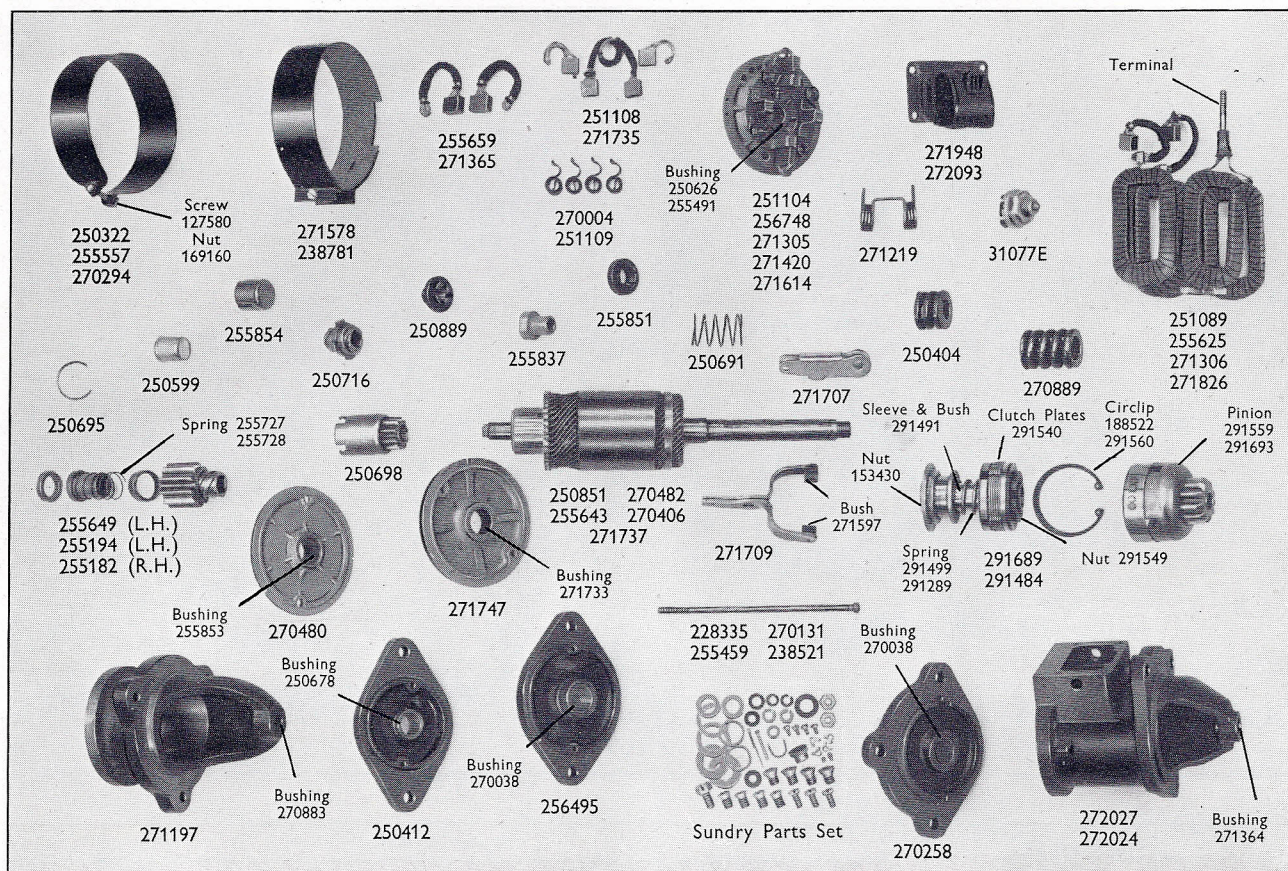


STARTING MOTORS	A30, A40 and A50 Models	A70 and A90 (all models), Austin-Healey '100', Hire Car and Taxi (Petrol)	'Princess' (all models), Ambulance, Hears, Coach Series II, I and I½ ton Vans, 4x4 Truck and 2, 3 and 5 ton Trucks (Petrol)	'Champ' (Civilian)	2 and 5 ton Petrol Tanker	Hire Car and Taxi (Diesel)	2 and 3 ton Truck (Diesel)
Part No. ...	25022F	25521D	26043A	26061A	26066A	26116A	26109D
Model ...	M35G-I	M418G	M45G	M45G	M45G	M45G	M45G
Type ...	L3-I	L3	L7	YW5	FA81	A211	FA90
Detailed Parts							
§ Cover band ...	250322	255557	270294	270294	238781	271578	271578
Screw, cover fixing ...	127580	127580	127580	127580	127580	127580	127580
Nut, cover fixing screw ...	169160	169160	169160	169160	169160	169160	169160
§ Cap, shaft ...	250599	255854	255854	255854	255854	—	—
§ Brushes, set ...	251108	255659	255659	255659	271365	271735	271735
§ Bracket or frame, commutator end ...	251104	256748	271305	271305	271420	271614	271614
§ Bushing, bearing ...	250626	255491	255491	255491	255491	255491	255491
§ Springs, set, brush tension ...	251109	270004	270004	270004	270004	270004	270004
§ Nut, shaft ...	250889	255851	255851	255851	255851	—	—
§ Spring, main ...	250404	270889	270889	270889	270889	—	—
§ Pinion and sleeve ...	250698	255649	255649	255182	255194	291693	291559
§ Spring, pinion retaining ...	250691	255728	255728	255727	255728	—	—
§ Drive assembly ...	—	—	—	—	—	291689	291484
§ Sleeve, screwed, with control nut ...	250716	—	—	—	—	—	—
§ Ring, barrel retaining ...	250695	—	—	—	—	—	—
Engaging lever and shoe ...	—	—	—	—	—	271709	271709
Top lever and stirrup ...	—	—	—	—	—	271707	271707
Bush, gunmetal, friction ...	—	—	—	—	—	271597	271597
Spring, lever return ...	—	—	—	—	—	271219	271219
§ Spring, tension ...	—	—	—	—	—	291289	291499
§ Sleeve and bush ...	—	—	—	—	—	291491	291491
Nut, brake plate ...	—	—	—	—	—	—	153430
§ Circlip, barrel retaining ...	—	—	—	—	—	291560	188522
Locking nut ...	—	—	—	—	—	291549	291549
§ Clutch plates, set ...	—	—	—	—	—	291540	291540
Shim, clutch adjusting (.006") ...	—	—	—	—	—	291374	291374
Shim, clutch adjusting (.005") ...	—	—	—	—	—	291378	291378
Shim, clutch adjusting (.004") ...	—	—	—	—	—	291379	291379
§ Switch ...	—	—	—	—	—	31077E	31077E
Dust cover, rubber ...	—	—	—	—	—	272093	271948
§ Bracket or frame, drive end ...	250412	256495	270258	271197	270258	272084	272027
§ Bushing ...	250678	270038	270038	270883	270038	271364	271364
§ Bracket or frame, intermediate ...	—	—	—	270480	—	*271747	*271747
§ Bushing, intermediate bracket ...	—	—	—	255853	—	*271733	*271733
§ Armature ...	250851	255463	270482	270406	270482	271737	271737
§ Field coils ...	251089	255625	271306	271306	271306	271826	271826
Terminal ...	251307	255400	255835	255835	256333	255835	255835
§ Bolt, through fixing ...	228335	255459	255459	270131	255459	238521	238521
Terminal, main ...	—	—	—	—	271429	—	—
§ Sundry parts, set ...	256762	256762	256762	256762	256762	271731	271731

* Brake.

† Bearing collar.

§ Recommended spares for stock.

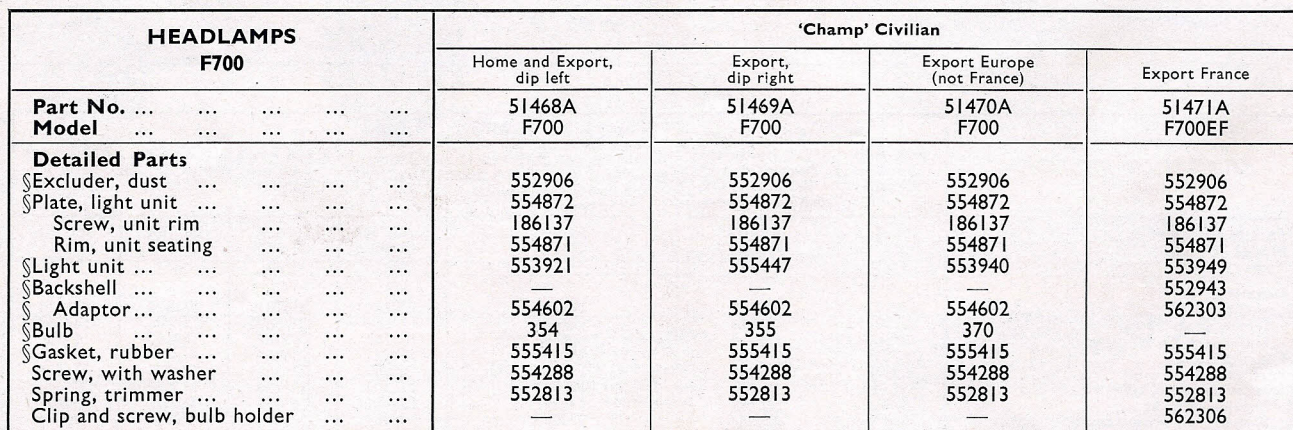

§ Recommended spares for stock.

HEADLAMPS F700



HEADLAMPS F700	A30 and A70 (all models) and Austin-Healey '100'				
	Home and Export, dip left	Export, dip right	Export Europe (not France)	Export France	Export U.S.A. (Austin-Healey '100' only)
Part No.	51336A	51337A	51339A	51341A	51509A
Model	F700	F700	F700	F700EF	F700
Detailed Parts					
§ Rim or door	554440	554440	554440	554440	554440
§ Screw, rim fixing	116141	116141	116141	116141	116141
Washer, screw retaining	161385	161385	161385	161385	161385
§ Excluder, dust	552906	552906	552906	552906	552906
§ Plate, light unit retaining	554872	554872	554872	554872	554872
§ Screw, unit rim	186137	186137	186137	186137	186137
Rim, unit seating	554871	554871	554871	554871	554871
Piece, packing	—	—	—	553537	—
§ Light unit	553921	555447	553940	553949	555447
§ Backshell	—	—	—	552943	—
§ Adaptor	554602	554602	554602	562303	553724
Clip and screw	—	—	—	562306	—
§ Bulb	354	355	370	—	355
§ Gasket, rubber	555415	555415	555415	555415	555415
Screw, with washer	554288	554288	554288	554288	554288
Spring, trimmer	552813	552813	552813	552813	552813
§ Conversion adaptor	—	—	—	—	554691


HEADLAMPS F700	A40 'Cambridge' (GS5), A50 'Cambridge' (HS5) and A90 'Westminster' (BS4)			
	Home and Export, dip left	Export, dip right	Export Europe (not France)	Export France
Part No.	51515F	51516H	51517F	51518F
Model	F700	F700	F700	F700EF
Detailed Parts				
§ Rim or door	554982	554982	554982	554982
§ Screw, rim fixing	554983	554983	554983	554983
Washer, screw retaining	161385	161385	161385	161385
§ Excluder, dust	552906	552906	552906	552906
§ Plate, light unit retaining	554872	554872	554872	554872
§ Screw, unit rim	186137	186137	186137	186137
Rim, unit seating	554871	554871	554871	554871
§ Light unit	553921	555447	553940	553949
§ Backshell	—	—	—	552943
§ Adaptor	554602	554602	554602	562303
Clip and screw	—	—	—	562306
§ Bulb	354	355	370	—
§ Gasket, rubber	554279	554279	554279	554279
Screw, with washer	554288	554288	554288	554288
Spring, trimmer	552813	552813	552813	552813

HEADLAMPS F700	A40 'Countryman' (GP5), Van (GV5), Pick-up Truck (GQU5), Coach (CXB) Series II, 2 and 3 ton Trucks Series II (Petrol and B.M.C. Diesel), 5 ton Truck Series II (Petrol and Perkins P6 Diesel)			
	Home and Export, dip left	Export, dip right	Export Europe (not France)	Export France
Part No.	51344B	51345D	51346B	51411A
Model	F700	F700	F700	F700EF
Detailed Parts				
§ Rim or door	554439	554439	554439	554439
§ Screw, rim fixing	116141	116141	116141	116141
Washer, screw retaining	161385	161385	161385	161385
§ Excluder, dust	552906	552906	552906	552906
§ Plate, light unit	554872	554872	554872	554872
§ Screw, unit rim	186137	186137	186137	186137
Rim, unit seating	554871	554871	554871	554871
Piece, packing	—	—	—	553537
§ Light unit	553921	555447	553940	553949
§ Backshell	—	—	—	552943
§ Adaptor	554602	554602	554602	562303
Clip and screw	—	—	—	562306
§ Bulb	354	355	370	—
§ Gasket, rubber	555416	555416	555416	555416
Screw, with washer	554288	554288	554288	554288
Spring, trimmer	552813	552813	552813	552813

§ Recommended spares for stock.




HEADLAMPS P100

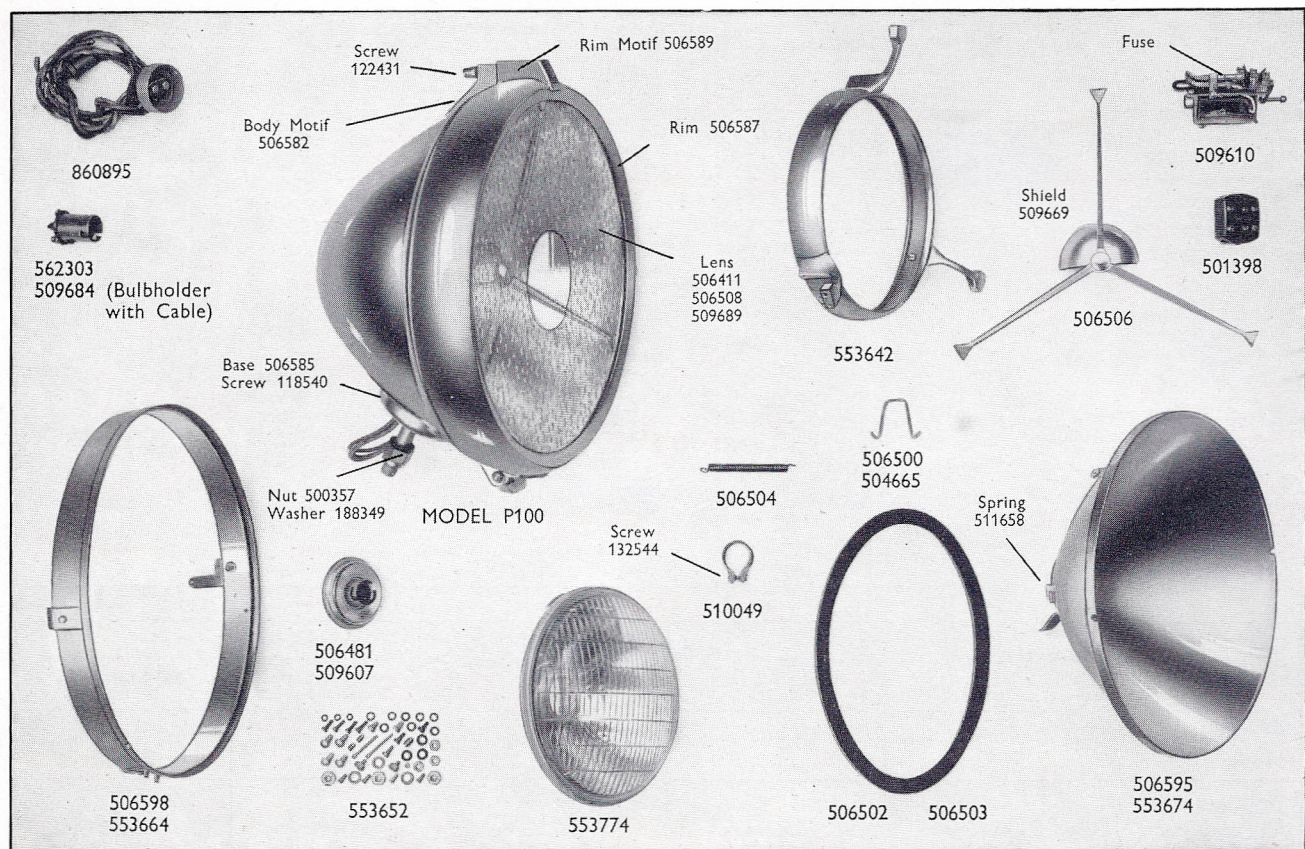

HEADLAMPS P100	Ambulance (DAI) and Hearse (DHI)				
	Home, dip left	Home, non-dip	Export	Export U.S.A.	Export France
Part No.	50532A	50533A	50502A	50773B	50820A
Model	P100LS-EDS	P100	P100LS-EDS	P100	P100EF
Detailed Parts					
§ Rim or door	506587	506587	506587	506587	506587
§ Wire	506500	506500	506500	506500	506500
§ Bead, rubber	506502	506502	506502	506502	506502
§ Lens	509689	509689	506508	506411	506508
§ Motif, with screws	506589	506589	506589	506589	506589
§ Dipper unit	509610	—	509610	—	—
§ Fuse	188236	—	188236	—	—
§ Clip and screw, bulb holder	510049	510049	510049	—	—
§ Screw	132544	132544	132544	—	—
§ Light unit	—	—	—	553774	—
§ Rim unit	—	—	—	553642	—
§ Backshell	509607	509607	509607	—	—
§ Backshell, with bulb holder	—	—	—	—	506481
§ Bulb holder	509684	509684	509684	860895	562303
§ Reflector	506595	506595	506595	506595	553674
§ Wire, light unit fixing	—	—	—	504665	—
§ Spring, backshell securing	511658	511658	511658	511658	511658
§ Spring, reflector return	506504	506504	506504	506504	506504
§ Bulb	96	96	96	303	—
§ Bulb shield	509669	509669	509669	—	509669
§ Tripod	506506	506506	506506	—	506506
§ Rim, extension	506598	506598	506598	553664	506598
§ Buffer, rubber	506473	506473	506473	506473	506473
§ Junction box	501398	501398	501398	501398	501398
§ Base	506585	506585	506585	506585	506585
§ Screw, base fixing	118540	118540	118540	118540	118540
§ Nut, lamp fixing	500357	500357	500357	500357	500357
§ Washer, lamp fixing	188349	188349	188349	188349	188349
§ Screw, rim fixing	122431	122431	122431	122431	122431
§ Motif, body	506582	506582	506582	506582	506582
§ Bead, rubber	506503	506503	506503	506503	506503
§ Sundry parts, set	553652	553652	553652	553652	553652

§ Recommended spares for stock.

HEADLAMPS PF770 AND ML143

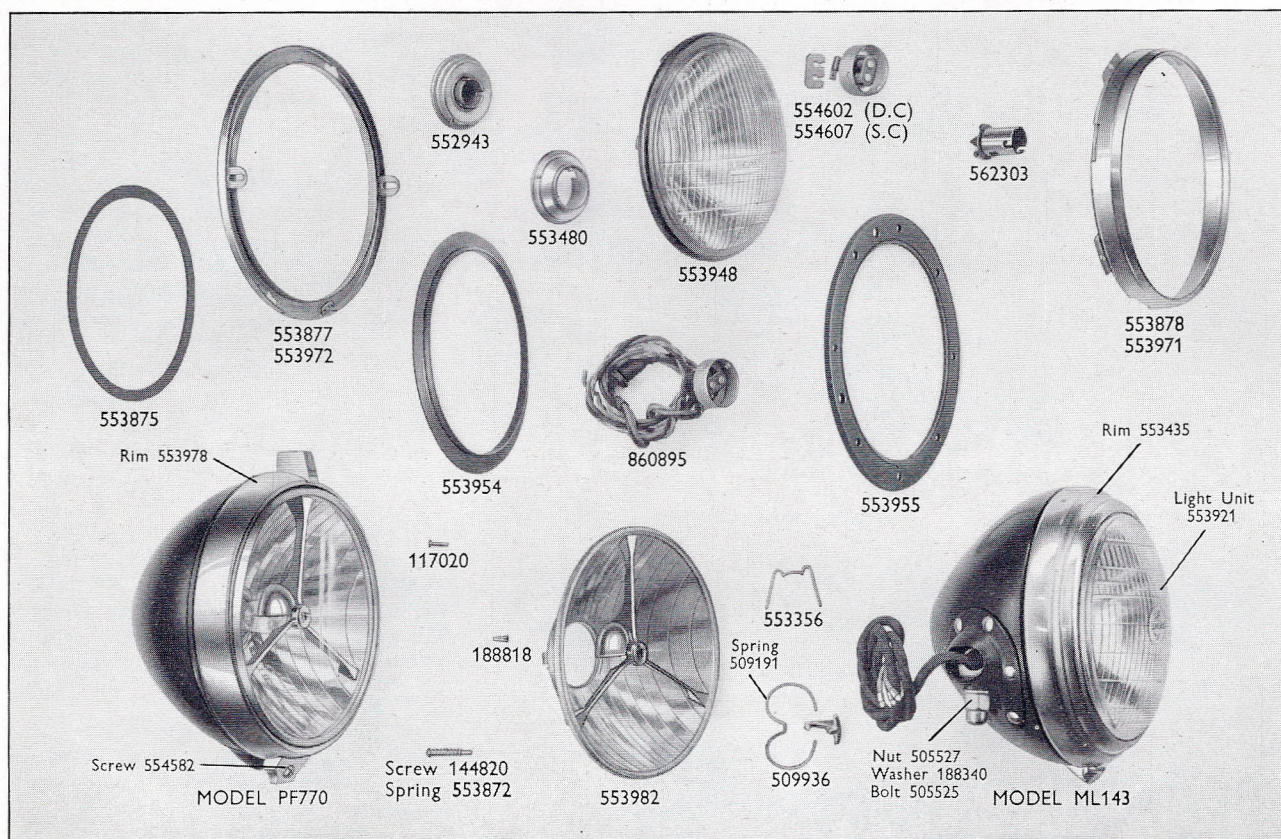


HEADLAMPS PF770	'Princess' (all models)					HEADLAMPS ML143	Hire Car (FL1) and Taxi (FX3) (Petrol and B.M.C. 2.2 litre Diesel)	
	Home and Export, dip left	Home non-dip	Export, dip right	Export Europe (not France)	Export France		Home, left hand	Home, right hand
Part No. ...	51054A	51055A	A51054A	B51054A	51056A	Part No. ...	51644A	51645A
Model ...	PF770	PF770	PF770	PF770	PF770EF	Model ...	ML143	ML143
Detailed Parts								
§ Rim or door ...	553978	553978	553978	553978	553978	§ Rim or door ...	553435	553435
§ Screw, rim fixing	554582	554582	554582	554582	554582	§ Wires, light unit fixing ...	553356	553356
Screw, trimmer ...	144820	144820	144820	144820	144820	§ Adaptor ...	554602	554602
Spring, control ...	553872	553872	553872	553872	553872	§ Light unit ...	553921	553921
Ring, fixing ...	553877	553877	553877	553877	553972	§ Bulb ...	354	354
§ Adaptor ...	860895	554607	860895	860895	562303	§ Nut, lamp fixing ...	505527	505527
§ Sleeve, terminal ...	188818	188818	188818	188818	188818	Washer, shakeproof	188340	188340
§ Housing, light unit	553878	553878	553878	553878	553971	§ Catch, rim ...	509936	509936
§ Light unit ...	553982	553982	553982	553982	553948	Spring, catch ...	509191	509191
§ Backshell ...	553480	553480	553480	553480	552943	Bolt, lamp fixing ...	505525	505525
§ Excluder, rubber...	553954	553954	553954	553954	553954			
§ Gasket, body ...	553955	553955	553955	553955	553955			
§ Buffer, rubber ...	553875	553875	553875	553875	—			
§ Bulb ...	302	185	303	370	—			
Screw, body fixing	117020	117020	117020	117020	117020			

§ Recommended spares for stock.



SIDE, FLASHER AND SUNDRY LAMPS

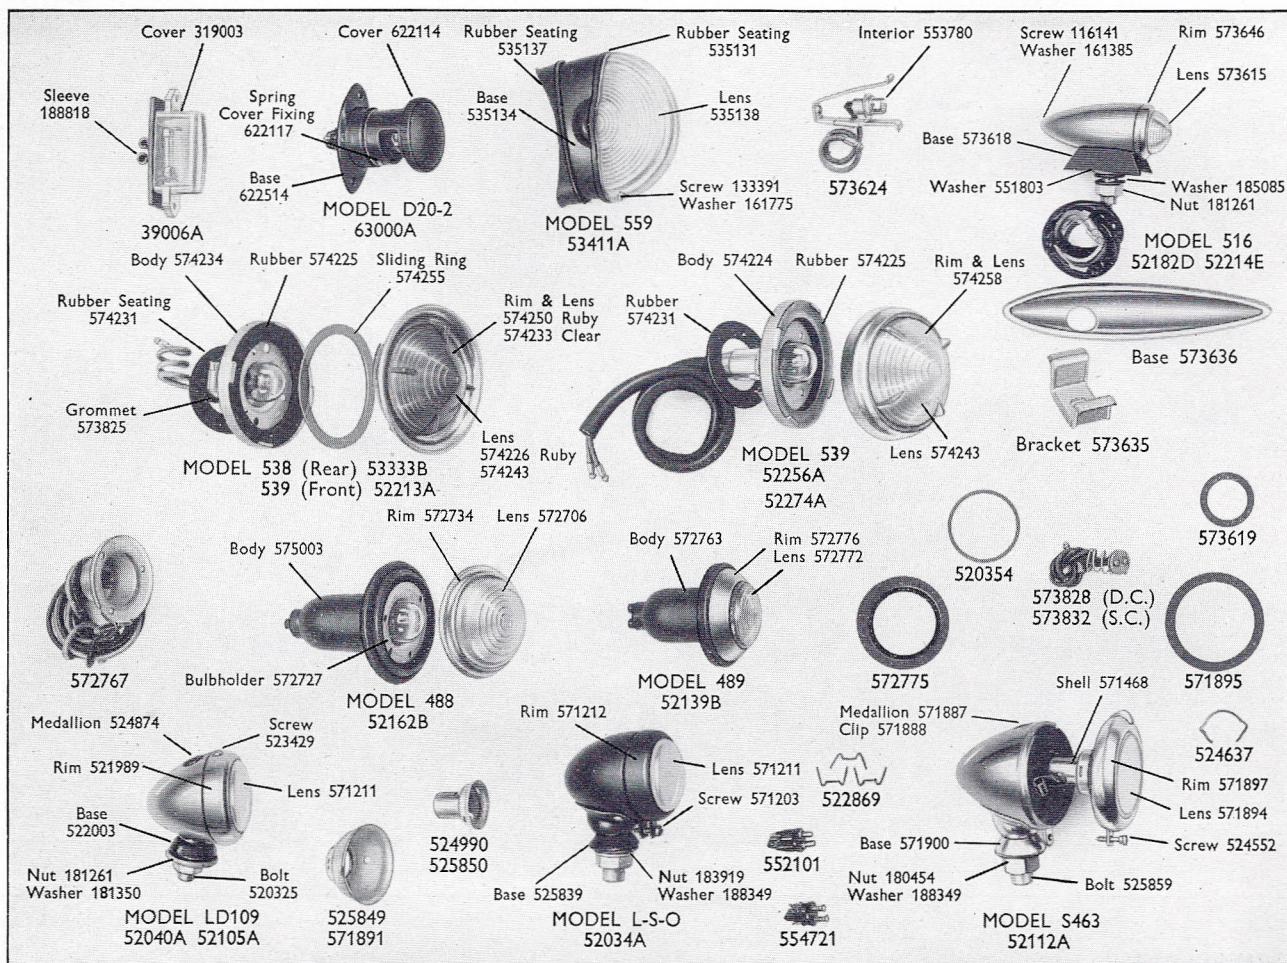

SIDE LAMPS	A30 and A70 (all models), A40 'Cambridge' (GS5) and A50 'Cambridge' (HS5)	A90 'Westminster' (BS4)	SIDE LAMPS	Hire Car (FLI) (Petrol and 2.2 litre B.M.C. Diesel)	Taxi (FX3) (Petrol and 2.2 litre B.M.C. Diesel), 'Champ' (Civilian), Coach, 1½ ton 4×4 'Cargo' Truck, 2, 3 and 5 ton Trucks (Petrol and B.M.C. Diesel)	2 and 5 ton Petrol Tankers
Part No.	52182D	52214E	Part No.	52040A	52105A	52034A
Model	516	516	Model	LD109A	LD109	L-S-O
Detailed Parts			Detailed Parts			
§Screw, bulb holder fixing	116141	116141	§Rim or door	521989	521989	571212
Washer, screw retaining	161385	161385	§Screw, with locking plate	523429	523429	571203
§Rim or door	573646	573646	§Wires, lens fixing	522869	522869	522869
§Lens	573615	573615	Washer, lens joint	520354	520354	520354
§Rubber, lens seating	573619	573619	§Lens	571211	571211	571211
Bracket and bulb holder	573624	573624	§Adaptor and shell	524990	524990	525850
§ Interior, bulb holder	553780	553780	§ Interior	—	—	552101
§Nut, lamp fixing	181261	181261	§Reflector	525849	525849	525849
Washer, spring	185085	185085	§Bulb	207	207	209
Base, lamp seating	573618	573618	§Nut, lamp fixing	181261	181261	183919
Washer, mudwing	551803	551803	Washer, shakeproof	188350	188350	188349
§Bulb	222	222	Base, lamp seating	522003	522003	525839
			Bolt, lamp fixing	520325	520325	—
			Medallion	524874	524874	—
			Wire, bulb holder fixing	—	—	524637

§ Recommended spares for stock.

SIDE, FLASHER AND SUNDRY LAMPS



SIDE LAMP	Ambulance (DAI) and Hears (DHI)	SIDE LAMP	1 and 1½ ton Vans	SIDE LAMP	A40 'Countryman' (GP5), Van (GV5) and Pick-up Truck (GQ5)
Part No. Model	52112A S463	Part No. Model	52274A L539	Part No. Model	52139B 489
Detailed Parts		Detailed Parts		Detailed Parts	
§ Rim or door	571897	§ Rim and lens	574258	§ Rim and lens	572776
§ Wires, lens fixing	522869	Body	574224	§ Wires, set	522869
§ Screw, rim fixing	524552	§ Interior	553780	§ Lens... ..	572772
§ Bead	571895	§ Bulb	222	§ Gasket	572775
§ Lens... ..	571894	§ Rubber, lens seating... ..	574225	§ Bulb holder	572767
Shell, bulb holder... ..	571468	§ Rubber, body seating	574231	§ Interior	553780
§ Sleeve, terminal	188818	§ Sliding ring	574255	§ Body, rubber... ..	572763
§ Interior, bulb holder	552103	§ Lens	574243	§ Bulb	222
§ Reflector	571891				
Wire, bulb holder fixing	524637				
§ Bulb... ..	207				
§ Nut, lamp fixing	180454				
Washer, shakeproof	188349				
Base... ..	571900				
Screw, lamp fixing	525859				
Clip, medallion	571888				
Medallion	571887				


SIDE FLASHER	Austin-Healey '100'	ROOF FLASHER	Taxi (FX3) and Hire Car (FL1) (Petrol and 2.2 litre B.M.C. Diesel)	FRONT & REAR FLASHER	A50 'Cambridge' (HS5) and A90 'Westminster' (BS4)	'Princess' (all models)
Part No. Model	52162B 488	Part No. Model	53411A 559	Part No. Model	Front 52213A 539	Rear 53333B 538 52256A C539
Detailed Parts		Detailed Parts		Detailed Parts		
§ Rim or door	572734	§ Lens	535138	§ Rim and lens	574233	574250 574258
§ Lens	572706	§ Screw, lens fixing	133391	Body	574234	574234 574224
§ Sleeve, terminal	188818	Washer, screw retaining	161775	§ Interior, bulb holder	573832	573832 573828
§ Body, rubber	575003	§ Rubber, lens seating	535131	§ Bulb	382	382 380
§ Interior... ..	554721	Rubber, base seating	535137	§ Rubber, lens seating	574225	574225 574225
§ Bulb	380	Base	535134	§ Rubber, body seating	574231	574231 574231
§ Bulb holder, with interior	572727	§ Sleeve, terminal	188818	§ Grommet, cable	—	573825 —
		§ Bulb	382	§ Sliding ring	574255	574255 574255
				§ Lens	574243	574226 574243

BONNET LIGHT AND MAP READING	'Princess' (all models), Ambulance (DAI) and Hears (DHI)	COURTESY LAMP	'Princess' (DS6 and DM4)	DASH LAMP	2 and 5 ton Petrol Tankers
Part No. Model	39006A PIL	Part No. Model	52139B 489	Part No. Model	63000A D20-2
Detailed Parts		Detailed Parts		Detailed Parts	
Cover	319003	§ Rim or door	572776	§ Cover	622114
§ Bulb	256	§ Wires, set	522869	§ Base, with bulb holder	622514
§ Sleeve, terminal	188818	Gasket, rubber	572775	§ Spring, cover fixing	622117
		§ Lens	572772	§ Bulb	209
		§ Bulb holder	572767		
		§ Interior	553780		
		§ Body, rubber	572763		
		§ Bulb	222		

§ Recommended spares for stock.




FOG AND DRIVING LAMPS

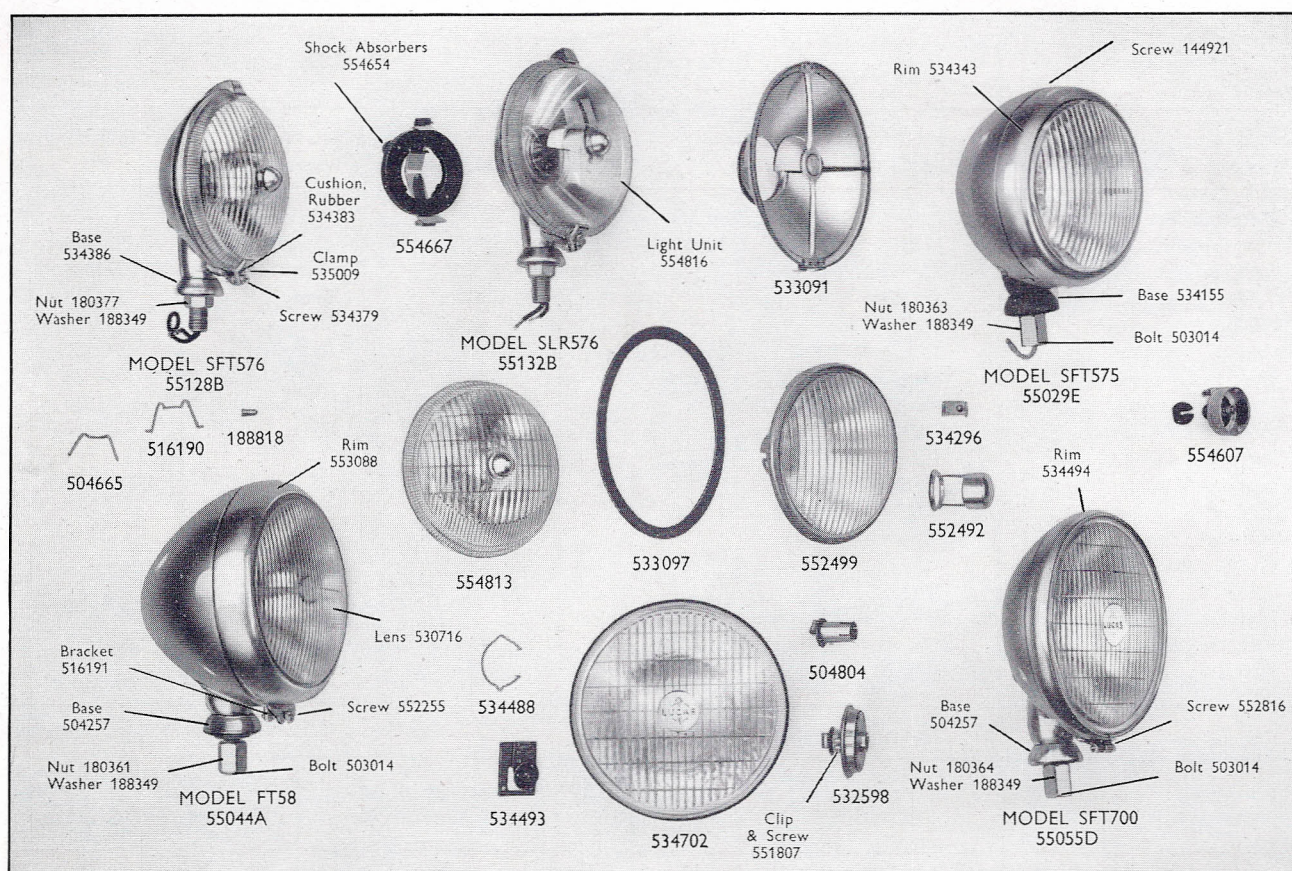

FOG LAMPS	Austin-Healey '100'	'Princess' (all models)	Ambulance (DAI) and Hearse (DHI)	Hire Car (FLI) and Taxi (FX3) (Petrol and 2.2 litre B.M.C. Diesel)	DRIVING LAMP	Austin-Healey '100'
Part No.	55128B	55055D	55044A	55029E	Part No.	55132B
Model	SFT576	SFT700	FT58	SFT575	Model	SLR576
Detailed Parts					Detailed Parts	
§Rim or door	—	534494	533088	534343	§Light unit	554816
§Screw, rim fixing	—	552816	552255	144921	§Adaptor	554667
§Light unit	554813	534702	—	552499	§Shock absorbers	554654
§Spring, bulb retaining	—	534488	—	—	§Bulb	185
§Bead	—	—	533097	—	§Clamp, light unit	535009
§Wires, lens fixing	—	—	516190	504665	§Screw, clamp	534379
§Shield, bulb	—	552492	—	552492	§Base	534386
§Lens	—	—	530716	—	§Lockwasher	188349
§Nut, lamp fixing	180377	180364	180361	180363	§Nut, fixing	180377
§Washer, lock	—	188349	188349	188349	§Cushion, clamp	534383
§Base	534386	504257	504257	534155		
§Contact assembly	—	534493	—	—		
§Adaptor	554667	—	504804	554607		
§Bolt, lamp fixing	—	503014	503014	503014		
§Bulb	323	323	57	185		
§Shock absorbers	554654	—	—	—		
§Clamp, light unit	535009	—	—	—		
§Screw, clamp	534379	—	—	—		
§Lockwasher	188349	—	—	—		
§Cushion, clamp	534383	—	—	—		
§Plate, rim fixing	—	—	—	534296		
§Reflector	—	—	533091	—		
§Bracket, body	—	—	516191	—		
§Sleeve, terminal	—	—	—	188818		
§Backshell	—	—	532598	—		
§Clip and screw	—	—	551807	—		

§ Recommended spares for stock.

STOP TAIL, STOP TAIL & REFLEX, STOP TAIL & REVERSE LAMPS

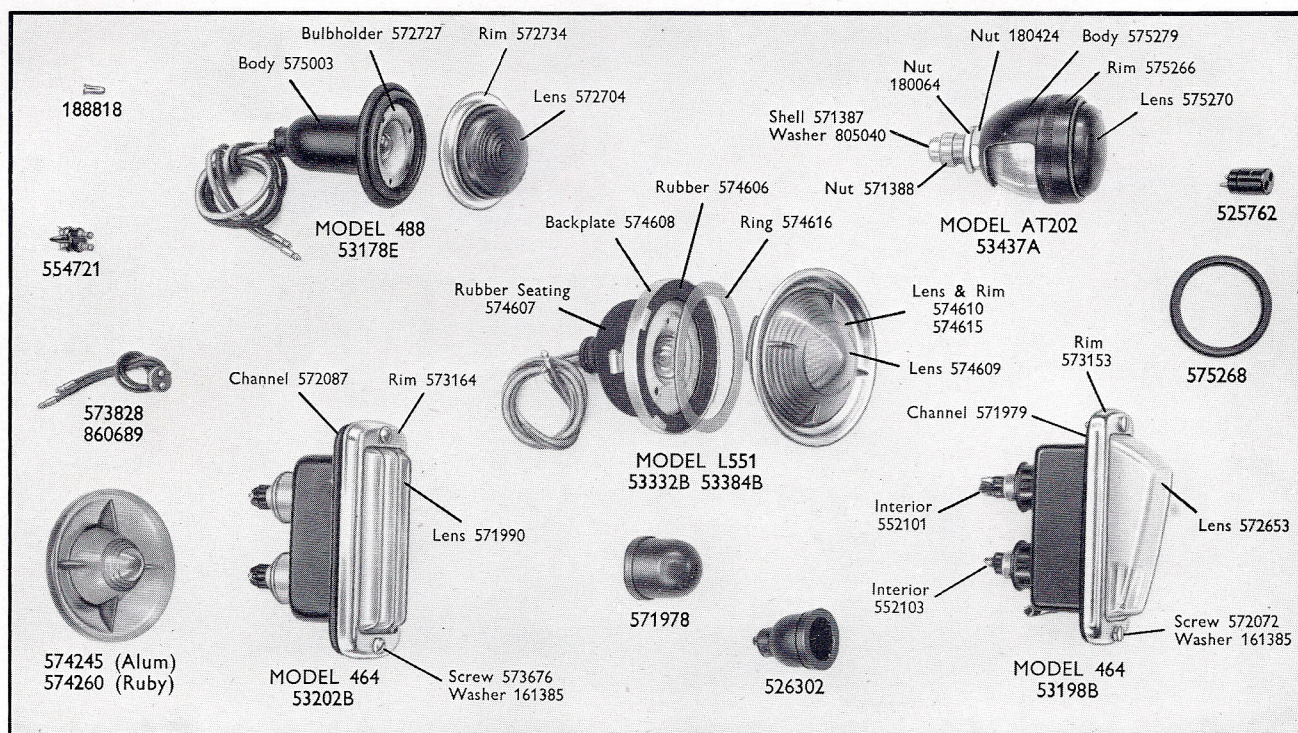


STOP TAIL AND REFLEX LAMP	A40 'Cambridge (GS5), A50 'Cambridge (HS5) and A90 'Westminster' (BS4)	'Princess' (all models)	STOP TAIL AND REVERSE LAMP	'Princess' (all models)	Ambulance (DAI) and Hears (DHI)
Part No.	53332B	53384B	Part No.	53202B	53198B
Model	L551	L551	Model	464	464
Detailed Parts			Detailed Parts		
§Rim and lens	574610	574615	§Rim or door	573164	573153
§Rubber, lens seating	574606	574606	§Screw, rim fixing	573676	572072
Backplate	574608	574608	§Washer, screw retaining	161385	161385
§Rubber, body seating	574607	574607	§Lens	571990	572653
§Interior	860689	573828	§Channel, rubber	572087	571979
§Bulb	380	380	§Cover, bulb	571978	571978
§Sliding ring	574616	574616	§Sleeve, terminal	188818	188818
§Lens	574609	574609	§Interior, single contact	—	552103
			§Interior, double contact	552101	552101
			§Bulb, single contact	—	382
			§Bulb, double contact	380	380
			§Grommet, rubber	—	526302

STOP TAIL LAMP	A30 and A70 (all models), Austin-Healey '100', 'Champ' (Civilian), 1 and 1½ ton Vans, Taxi (FX3), Hire Car (FL3), 1½ ton 4×4 'Cargo' Truck and 2, 3 and 5 ton Trucks Series II (Petrol and B.M.C. Diesel)	STOP TAIL LAMP	2 and 5 ton Petrol Tankers
Part No.	53178E	Part No.	53437A
Model	488	Model	AT202
Detailed Parts		Detailed Parts	
§Rim or door	572734	Body	575279
§Lens	572704	§Rim or door	575266
§Sleeve, terminal	188818	§Lens	575270
§Body, rubber	575003	§Rubber, lens seating	575268
§Bulb holder	572727	§Interior	525762
§Interior	554721	§Nut, adaptor fixing	180424
§Bulb	380	§Nut, lamp fixing	180064
		§Nut, coupling	571388
		§Cover shell, cable	571387
		§Washer, cable cover shell	805040
		§Bulb	335

§ Recommended spares for stock.



STOP TAIL AND NUMBER PLATE LAMPS

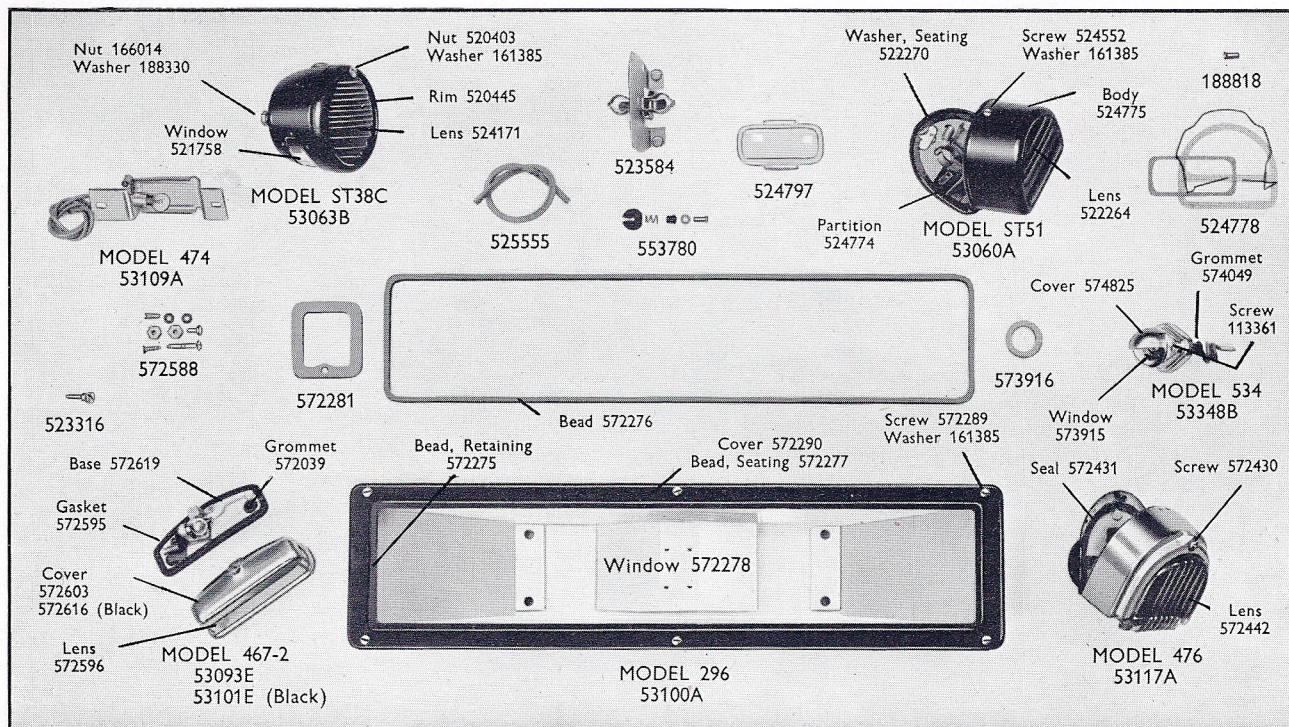


NUMBER PLATE LAMPS	A30 (all models) and A70 'Hereford' Saloon	A70 'Countryman' and Pick-up Truck, Taxi (FX3), Hire Car (FL3), 1 1/2 ton Vans, 1 1/2 ton 4x4 Cargo Truck, 2 and 3 ton Trucks Series II (Petrol and B.M.C. Diesel) and 5 ton Truck Series II (Petrol and Perkins P6 Diesel)	Hearse (DHI)	A40 'Cambridge' (GS5), A50 'Cambridge' (HS5) and A90 'Westminster' (BS4)	NUMBER PLATE LAMP	'Princess' (all models) and Ambulance (DAI)
					Part No. Model	53100A 296
Part No. Model	53093E 467-2	53101E 467-2	53109A 474	53348B L534	Detailed Parts	
Detailed Parts					§ Cover	572290
§ Cover	572603	572616	—	574825	§ Bead, window sealing ...	572276
§ Window or lens	572596	572596	—	573915	§ Bead, glass retaining ...	572275
§ Gasket, window seating ...	572595	572595	—	573916	§ Screw, cover fixing ...	572289
§ Grommet, cable	572039	572039	—	574049	§ Washer, screw retaining ...	161385
§ Bulb	222	222	989	222	§ Window	572278
§ Interior	—	—	553780	553780	§ Bead, box sealing	572277
§ Base	572619	572619	—	—	§ Interior, bulb holder ...	553780
§ Screw	—	—	—	113361	§ Bead	572281
§ Washer	—	—	—	161385	§ Screw, cover bracket fixing	523316
§ Sundry parts, set	572588	572588	—	—	§ Sleeve, terminal	188818
					§ Bulb	222

STOP TAIL AND NUMBER PLATE LAMPS	Ambulance (DAI)	A40 'Countryman' (GP5), Van (GV5), Pick-up Truck, Hire Car (FLI) and Taxi (FX3) (Petrol and B.M.C. Diesel)	STOP TAIL AND NUMBER PLATE LAMP	Coach Series II
Part No. Model	53117A 476	53060A ST51	Part No. Model	53063B ST38C
Detailed Parts			Detailed Parts	
§ Body	—	524775	§ Rim or door	520445
§ Washer, screw retaining ...	—	161385	§ Nut, fixing	520403
§ Screw, fixing	572430	524552	§ Washer	161385
§ Lens, number plate	—	524797	§ Bead	525555
§ Lens, stop tail	572442	522264	§ Lens	524171
§ Fixing parts, set	—	524778	§ Nut, partition fixing ...	166014
§ Sleeve, terminal	—	188818	§ Washer, shakeproof ...	188330
§ Partition	—	524774	§ Partition	523584
§ Bulb	382 *989	207	§ Sleeve, terminal	188818
§ Nut, lamp fixing	166014	166014	§ Bulb	207
§ Washer, spring	185037	185037	§ Window, with fixing parts	521758
§ Washer, body seating ...	—	522270	§ Nut, lamp fixing	166014
§ Seal, rubber	572431	—	§ Washer, spring	188330

* Number Plate.

§ Recommended spares for stock.

REVERSE, TAIL AND NUMBER PLATE LAMPS

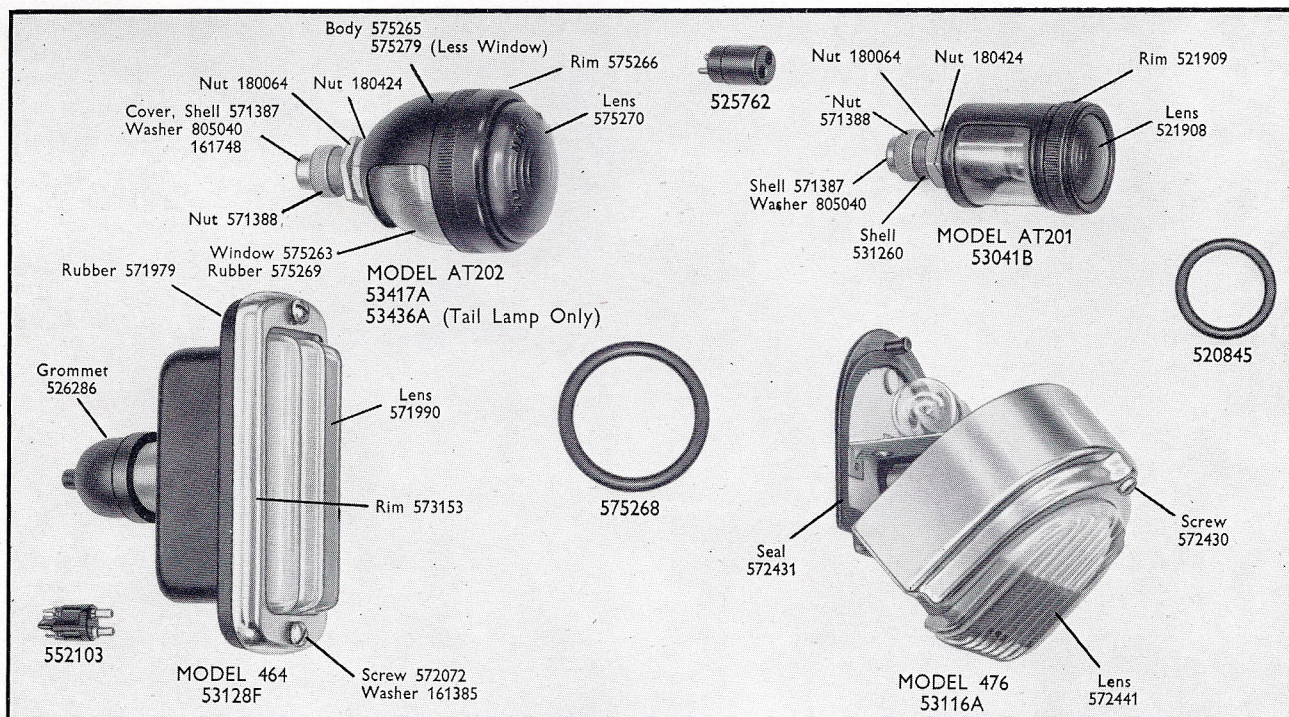


REVERSE LAMP	'Princess' (all models) Later	REVERSE TAIL AND NUMBER PLATE LAMP	Ambulance (DAI) Alternative
Part No.	53128F	Part No.	53116A
Model	464	Model	476
Detailed Parts		Detailed Parts	
§ Rim or door	573153	§ Screw, body fixing	572430
§ Screw, rim fixing	572072	§ Lens	572441
§ Washer, screw retaining	161385	§ Nut, lamp fixing	166014
§ Lens	571990	§ Washer, lamp fixing	185037
§ Channel, rubber	571979	§ Seal, rubber	572431
§ Sleeve, terminal	188818	§ Bulb, reverse	382
§ Interior	552103	§ Bulb, number plate	989
§ Grommet	526286		
§ Bulb	382		

TAIL AND NUMBER PLATE LAMP	2 and 5 ton Petrol Tankers	TAIL AND NUMBER PLATE LAMP	2 and 5 ton Petrol Tankers Later	TAIL LAMP	2 and 5 ton Petrol Tankers
Part No.	53041B	Part No.	53417A	Part No.	53436A
Model	AT201L	Model	AT202	Model	AT202
Detailed Parts		Detailed Parts		Detailed Parts	
§ Rim or door, with lens	521909	Body	575265	Body	575279
§ Lens, ruby	521908	§ Rim	575266	§ Rim	575266
§ Bead, rubber	520845	§ Lens	575270	§ Lens	575270
§ Nut, coupling	571388	§ Rubber, lens sealing	575268	§ Rubber, lens sealing	575268
§ Washer, cable cover	805040	§ Window	575263	§ Interior	525762
§ Shell, cable cover	571387	§ Rubber, window sealing	575269	§ Nut, fixing	180424
§ Interior, bulb holder	525762	§ Interior, bulb holder	525762	§ Nut, lamp fixing	180064
§ Nut, thick	180064	§ Nut, adaptor fixing	180424	§ Nut, coupling	571388
§ Nut, thin	180424	§ Nut, lamp fixing	180064	§ Shell, cable cover	571387
§ Shell, bulb holder	531260	§ Nut, coupling	571388	§ Washer, cable cover shell	805040
§ Bulb	209	§ Shell, cable cover	571387	§ Bulb	209
		§ Washer, cable cover shell	161748		
		§ Bulb	209		

§ Recommended spares for stock.



REFLEX REFLECTORS, WARNING LIGHTS AND BULBS

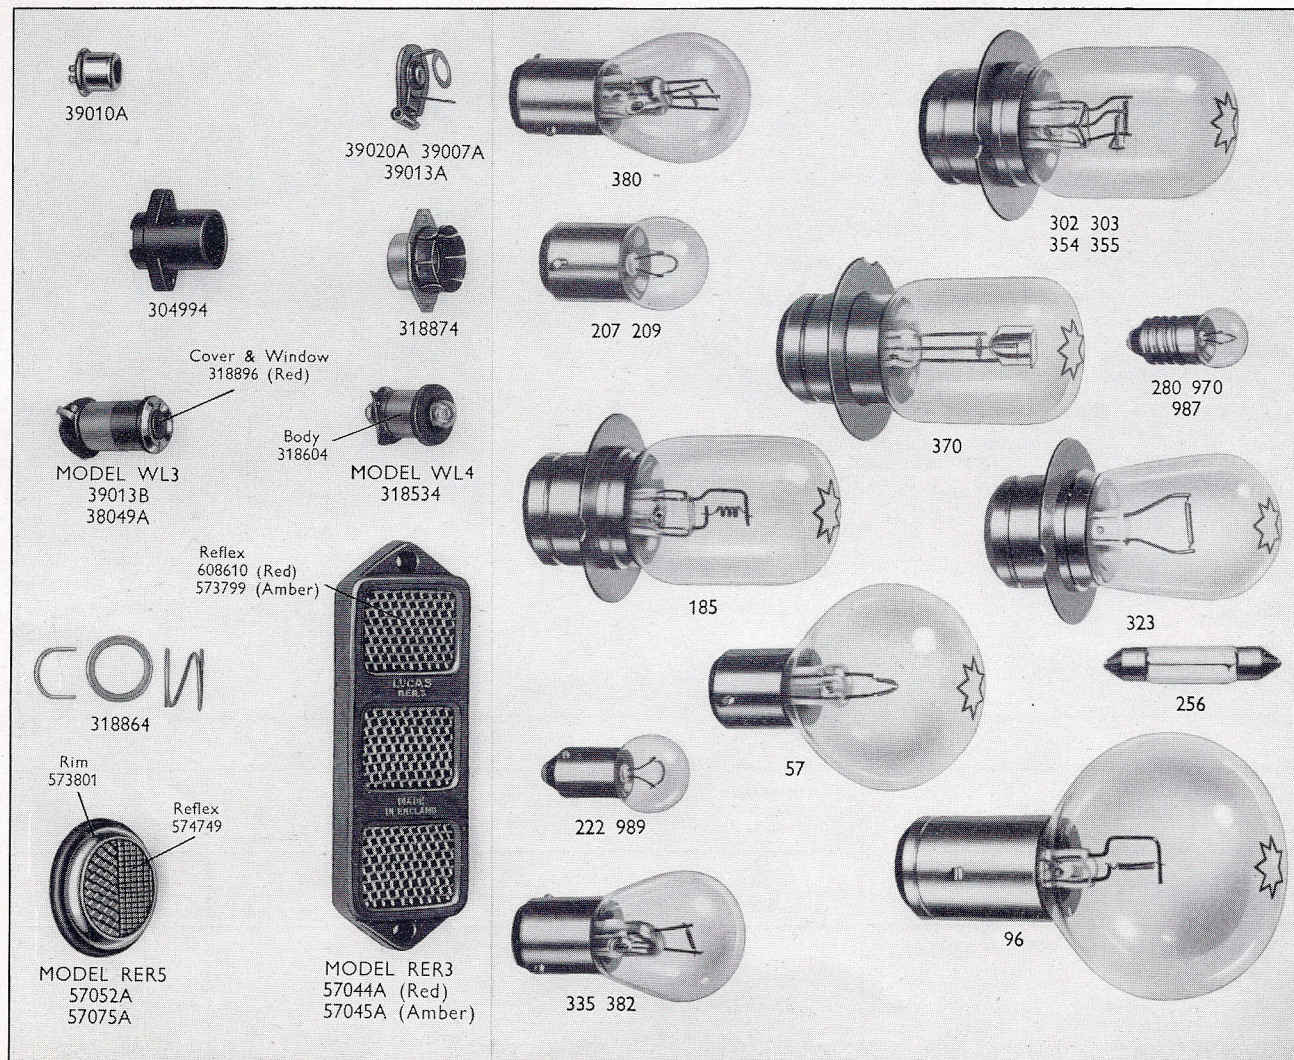

REFLEX REFLECTORS	A30 (all models)	A40 'Countryman' (GP5), Van (GV5), Pick-up Truck (GQU5), A70 (all models), Austin-Healey '100' and 1 and 1½ ton Vans	1½ ton 4×4 'Cargo' Truck, 2 and 5 ton Petrol Tankers, 2 and 3 ton Trucks Series II and 5 ton Truck Series II (Petrol and B.M.C. Diesel)		'Champ' (Civilian)
Part No.	57075B	57052A	57044A	57045A	57044A
Model	RER5	RER5	RER3	RER3	RER3
Colour	Red	Red	Red	Amber	Red
Detailed Parts					
Reflex reflector	574749	574749	608610	573799	608610
§Rim	573801	573801	—	—	—

WARNING LIGHTS, IGNITION	Ambulance (DAI) and Hearse (DHI)	Hire Car (FLI) and Taxi (FX3)	1 and 1½ ton Vans	WARNING LIGHT, MAIN BEAM	'Princess' (all models), Ambulance (DAI) and Hearse (DHI)
Part No.	318534	38013B	38049A	Part No.	318534
Model	WL4	WL3-I	WL3-I	Model	WL4
Detailed Parts				Detailed Parts	
§Body	318604	—	—	§Body	318604
§Bulb	970	970	970	§Bulb	970
§Set of fixing parts	—	318864	318864		
§Cover and window	—	318896	318896		

§ Recommended spares for stock.





WINDSHIELD WIPERS

WINDSHIELD WIPERS		A30 (all models)	A40 and A50 'Cambridge'	A40 (Except 'Cambridge')	A70 (all models)	A90 'Westminster'	Austin- Healey '100'
Model	Type	CRT14 BN239	DR2 BN236	CRT14 BN185	CRT14 BN208	DR2 BN243	CRT15 BN233
Detailed Parts							
(1)	Motor	75230A	75251A	75145A	75150A	75251A	75144A
(2)	Cover, end, bakelite	741556	—	741556	741556	—	741556
(3)	Screw, thrust	739733	—	739733	739733	—	739733
(4)	Nut, adjusting	166043	—	166043	166043	—	166043
(5)	End cover, with bearing or terminal cover	—	743070	—	—	743070	—
(6)	Cover, front	—	—	—	—	—	—
(7)	Brushgear	733661	743171	733661	733661	743171	733661
(8)	Brush set	729367	729367	729367	729367	729367	729367
(9)	Coil assembly	739734	743173	739734	739734	743173	739734
(10)	Gear, intermediate, with pinion	—	—	—	—	—	—
(11)	Guide wheel	—	—	—	—	—	—
(12)	Sector	—	—	—	—	—	—
(13)	Bush, oscillating	—	—	—	—	—	—
(14)	Bolt, through fixing	—	743085	—	—	743085	—
(15)	Washer, bolt fixing	—	185022	—	—	185022	—
(16)	Bearing housing assembly	—	—	—	—	—	—
(17)	Armature	739731	743029	739731	739731	743029	739731
(18)	Handle, parking, with nut	—	—	—	—	—	—
(19)	Spindle	—	—	—	—	—	—
(20)	Spring, spindle	—	—	—	—	—	—
(21)	Cover, gearbox or rear	741582	743031	741582	741582	743031	741582
(22)	Worm wheel pinion and bearing	738988	—	738988	738988	—	738988
(23)	Guide wheel and plate	738908	—	738909	738908	—	738907
(24)	Connecting rod	738923	743068	738923	738923	743068	738923
(25)	Switch, adjusting or limit	—	743080	—	—	743080	—
(26)	Shaft and gear	—	743172	—	—	743172	—
(27)	Set of fixing parts	741628	743176	741628	741628	743176	741628
(28)	Stud, motor fixing	—	—	—	—	—	—
(29)	Packing piece, with bearing	—	—	—	—	—	—
(30)	Packing piece, $\frac{1}{4}$ "	—	—	—	—	—	—
(31)	Packing, langite	—	—	—	—	—	—
(32)	Plate, stop	—	—	—	—	—	—
(33)	Protector plate	—	—	—	—	—	—
(34)	Ferrule, outer casing retaining	—	740715	—	—	740715	—
(35)	Sundry parts, set	741596	743049	741596	741596	743049	741596
(36)	Crosshead and rack assembly	736364	743231	738764	736177	743234	738764
(37)	Cut to	27 $\frac{3}{8}$ "	41 $\frac{3}{8}$ "	31 $\frac{1}{8}$ "	37 $\frac{1}{8}$ "	—	30 $\frac{3}{8}$ "
(38)	Casing, outer, main	739855	745118	739855	739879	743316	739844
(39)	Casing, outer, less ferrules, offside wheelbox	740031	—	740031	740031	—	740031
(40)	End or guide tube, wheelbox	—	740746	—	—	740746	—
(41)	Casing, outer, wheelbox to wheelbox	739937	745119	739953	739969	743317	739979
(42)	Inner cable rack	—	—	—	—	—	—
(43)	Cut to	—	—	—	—	—	—
(44)	Casing, outer, wheelbox to control box	—	—	—	—	—	—
(45)	Casing, outer, less ferrules, nearside wheelbox	—	—	—	—	—	—
(46)	Control box	—	—	—	—	—	—
(47)	Gear wheel, fixed	—	—	—	—	—	—
(48)	Gear wheel, free	—	—	—	—	—	—
(49)	Knob	—	—	—	—	—	—
(50)	Wheelbox	72592K	72665A	72662A	72592K	72665A	72629D
(51)	Spindle and gear	736056	740955	736056	736056	740955	736056
(52)	Nut, fixing	—	153511	—	—	153511	181261
(53)	Tube, rubber, spindle	—	740711	—	—	740711	—
(54)	Grommet, wheelbox	—	—	—	—	—	—
(55)	Wheelbox, passenger side	—	—	—	—	—	—
(56)	Spindle and gear	—	—	—	—	—	—
(57)	Knob	—	—	—	—	—	—
(58)	Arm, straight	—	—	—	—	—	—
(59)	Arm, left hand crank	737629 *737763	741295	737445	737581	745081	737571
(60)	Arm, right hand crank	737628 *737762	741294	737444	737529	745080	737570
(61)	Clamp screw and collet	738621	—	738621	738621	—	738621
(62)	Blade	727759 *727803	738734	727802	738724	738734	738724
(63)	Stop, rubber, blade	730185	—	730185	—	—	—
(64)	Backplate and rubber	—	737783	—	738736	737783	738736
(65)	Suppressor	—	—	—	—	—	—

* AV4 and AP4.

† Coach (CBX) Series II.

§ Recommended spares for stock.

WINDSHIELD WIPERS



'Princess' (all models)	Ambulance (DAI) and Hearse (DHI)	Hire Car (FLI)	Taxi (FX3)	'Champ' (Civilian)	Coach (CXB) Series II, 2 & 5 ton Petrol Tankers and 2, 3 and 5 ton Trucks Series II	I and I½ ton Vans		I½ ton 4x4 'Cargo' Truck
						Right hand drive	Left hand drive	
DRI PD3	CRT11 BN172	CRT16 JH7	CRT12 JH6	CWI BN232	CWI BN161	CRT15 FA78	CRT15 FA79	CWI BN215
75188F	75151A	75150A	75150A	75198A	75130A	75146A	75146A	75168A (1)
—	741556	741556	741556	—	—	741556	741556	— (2)
—	739733	739733	739733	—	—	739733	739733	— (3)
—	166043	166043	166043	—	—	166043	166043	— (4)
740502	—	—	—	—	—	—	—	— (5)
—	—	—	—	730467	730468	—	—	730467 (6)
740687	733661	733661	733661	730244	730244	733661	733661	730244 (7)
729367	729367	729367	729367	730388	730388	729367	729367	730388 (8)
740593	739734	739734	739734	730669	730669	739734	739734	730669 (9)
—	—	—	—	733263	733263	—	—	733263 (10)
—	—	—	—	733295	733300	—	—	733300 (11)
—	—	—	—	730401	730401	—	—	730401 (12)
—	—	—	—	733298	733298	—	—	733298 (13)
743085	—	—	—	—	—	—	—	— (14)
185022	—	—	—	—	—	—	—	— (15)
740571	—	—	—	—	—	—	—	— (16)
740616	739731	739731	739731	733108	733108	739731	739731	733108 (17)
—	—	—	—	730466	730466	—	—	730466 (18)
—	—	—	—	732936	732936	—	—	732936 (19)
—	—	—	—	733270	733270	—	—	733270 (20)
740567	741582	741582	741582	730243	730243	741582	741582	732966 (21)
—	738988	738988	738988	—	—	738988	738988	— (22)
—	738906	738908	738908	—	—	738906	738906	— (23)
740563	738923	738923	738923	—	—	738923	738923	— (24)
740547	—	—	—	—	—	—	—	— (25)
740562	—	—	—	—	—	—	—	— (26)
740753	741583	741628	741628	—	—	741628	741628	— (27)
—	—	—	—	119184	119184	—	—	119184 (28)
—	—	—	—	733297	733297	—	—	733297 (29)
—	—	—	—	733291	—	—	—	733291 (30)
—	—	—	—	733269	733269	—	—	733269 (31)
—	—	—	—	733186	733186	—	—	733186 (32)
—	—	—	—	733462	—	—	—	733462 (33)
740715	—	—	—	—	—	—	—	— (34)
740899	741596	741596	741596	733439	733439	741596	741596	733439 (35)
741264	738987	738764	736364	—	—	738987	738499	— (36)
44 5/8"	17 5/8"	29 1/2"	26 7/8"	—	—	—	—	— (37)
745038	739855	739870	739844	—	—	739870	739870	— (38)
—	740031	740031	740031	—	—	740031	740031	— (39)
740746	735895	735895	—	—	—	—	—	— (40)
745039	—	739948	739981	—	—	—	739974	— (41)
—	736024	—	—	—	—	—	—	— (42)
—	29 5/8"	—	—	—	—	—	—	— (43)
—	739933	—	—	—	—	—	—	— (44)
—	740032	740032	—	—	—	—	—	— (45)
—	72606A	72602A	—	—	—	—	—	— (46)
—	735883	735883	—	—	—	—	—	— (47)
—	736290	736290	—	—	—	—	—	— (48)
—	738595	736104	—	—	—	—	—	— (49)
72647B	72662A	72560K	72632A	—	—	72624H	72624H	— (50)
740786	736056	736056	741567	—	—	736056	736056	— (51)
—	—	—	—	—	—	181261	181261	— (52)
740711	—	—	—	—	—	—	—	— (53)
—	—	729423	729423	—	—	—	—	— (54)
—	—	72603E	—	—	—	—	—	— (55)
—	—	738172	—	—	—	—	—	— (56)
—	—	736104	—	—	—	—	—	— (57)
—	737481	735072	735072	735055	735096 †735055	736411	736411	735096 (58)
741295	—	—	—	—	—	—	—	— (59)
741294	—	—	—	—	—	—	—	— (60)
—	738621	738621	738621	737587	737587	738621	738621	737587 (61)
741680	737482	727803	727803	727802	727802	741680	741680	727802 (62)
—	—	730185	730185	730185	730185	—	—	730185 (63)
—	—	—	—	—	—	—	—	— (64)
—	—	—	—	—	—	—	—	78117A (65)


* AV4 and AP4.

† Coach (CBX) Series II.

§ Recommended spares for stock.



FLASHER UNIT AND RELAY, JUNCTION BOXES, TERMINAL BLOCK AND AMMETERS

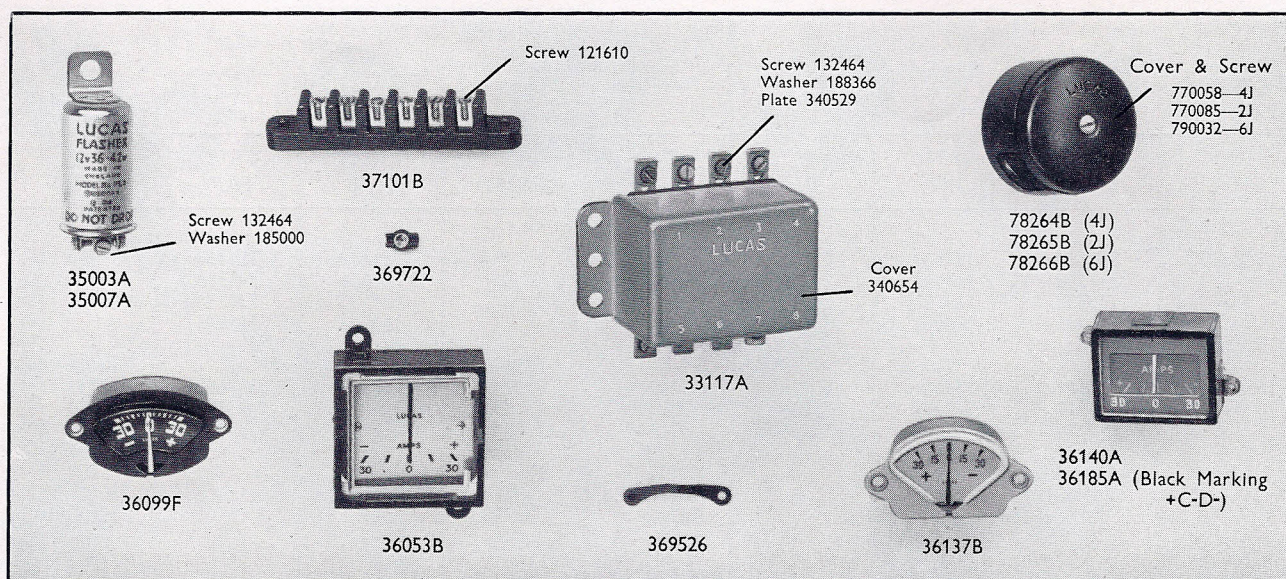


FLASHER UNIT	A40 and A50 'Cambridge', Austin-Healey '100', 'Princess' (all models) and A90 'Westminster'	Hire Car (FLI) and Taxi (FX3)	FLASHER RELAY	Austin-Healey '100' and 'Princess' (all models)
Part No. Model	35003A FL3	35007A FL3	Part No. Model	33117A DB10
Detailed Parts			Detailed Parts	
§Screw, terminal	132464	132464	Cover	340654
§Washer, terminal screw ...	185000	185000	§Screw, terminal	132464
			§Washer, terminal	188366
			Plate, locking, terminal ...	340529

JUNCTION BOXES	'Princess' (all models)	Hire Car (FLI), Taxi (FX3), 'Champ' (Civilian), Coach (CXB) Series II, 1½ ton 4×4 'Cargo' Truck and 2 and 5 ton Petrol Tankers	1 and 1½ ton Vans	TERMINAL BLOCK	A70 and 'Princess' (all models), Ambulance (DA1) and Hearse (DH1)
Part No. Model	78266B 6J	78264B 4J	78265B 2J	Part No. Model	37101B TB6
Detailed Parts				Detailed Parts	
§Cover and screw assembly ...	770032	770058	770085	Screw, terminal	121610
§Screw, terminal	121610	121610	121610		

AMMETERS	A70 (all models)	'Princess' (all models)	Ambulance (DA1) and Hearse (DH1)	Hire Car (FLI) and Taxi (FX3) (Petrol and Diesel)	'Champ' (Civilian), 1½ ton 4×4 'Cargo' Truck, 2 & 5 ton Petrol Tankers and 2, 3 and 5 ton Trucks Series II (Petrol and Diesel)
Part No. Model	36140A CZU55	36185A CZU55	36053B BM11	36137B CZU20	36099F CZU34
Detailed Parts					
§Nut, terminal	166043	166043	—	166043	166043
§Washer, terminal	185022	185022	—	185022	185022
§Screw, terminal	—	—	121610	—	—
§Screw, fixing	—	—	132464	—	—
§Washer, fixing	—	—	185000	—	—
Spring, retaining	—	—	369526	—	—
Contact assembly	—	—	369722	—	—
§Bulb	—	—	987	—	—

§ Recommended spares for stock.

TRAFFICATORS AND MIRRORS

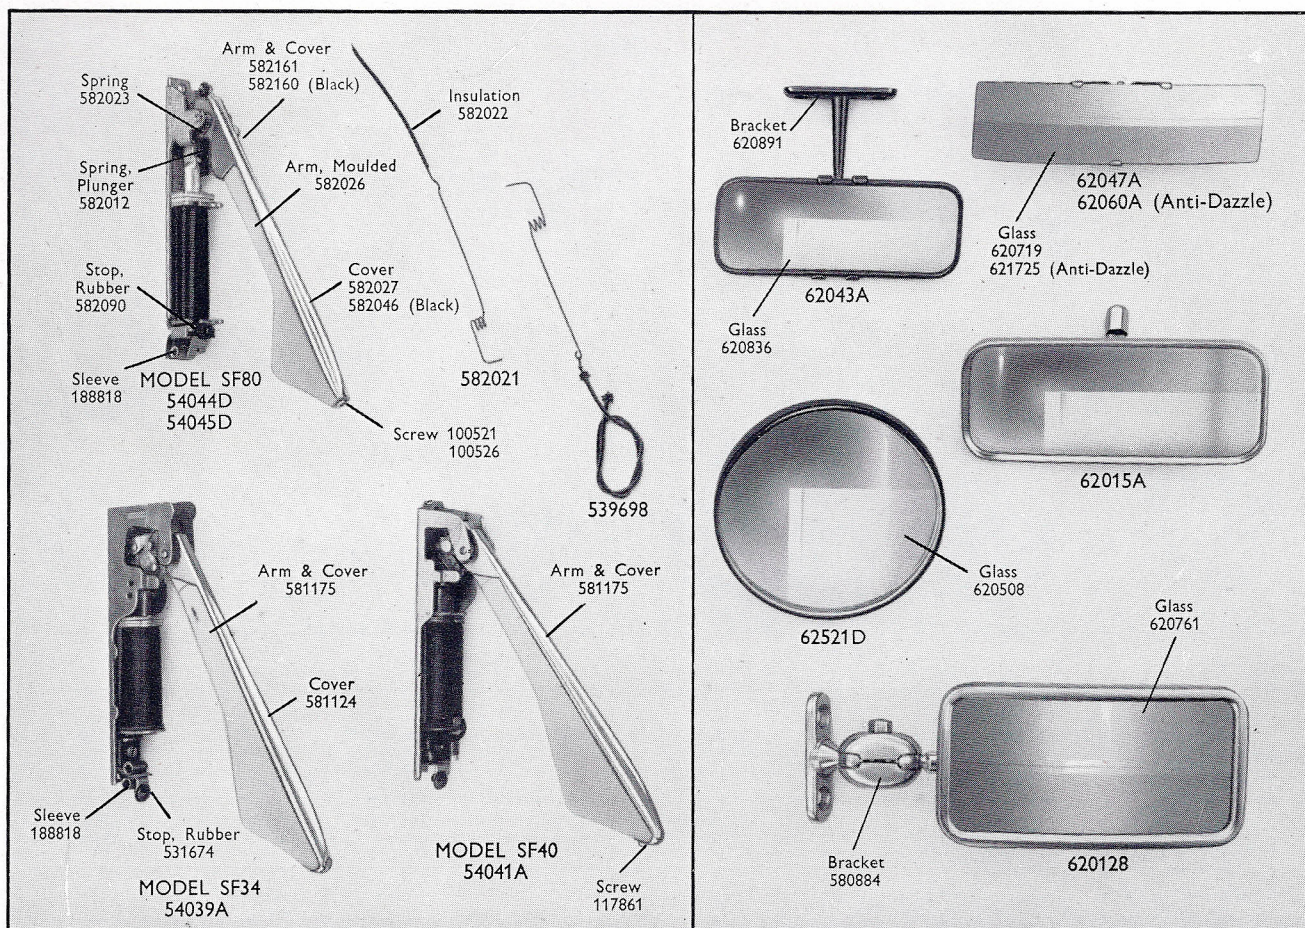


TRAFFICATORS	A30 (all models), A40 and A50 'Cambridge', A70 'Hereford', A90 'Westminster' and Austin-Healey '100'	A40 (except 'Cambridge') and A70 'Countryman'	Ambulance (DA1) and Hearse (DH1)	Hire Car (FL1) and Taxi (FX3)
Part No.	54044D	54045D	54041A	54039A
Model	SF80	SF80	SF40	SF34
Detailed Parts				
§ Arm and cover assembly ...	582161	582160	581175	581175
§ Cover, arm	582027	582046	581124	581124
§ Screw, cover fixing ...	100521	100526	117861	117861
§ Arm, moulded	582026	582026	—	—
§ Screw, arm fixing	100521	100521	—	—
§ Insulation, bulb lead ...	582022	582022	—	—
§ Lead, bulb	582021	582021	539698	539698
§ Sleeve, terminal	188818	188818	188818	188818
§ Bulb	256	256	256	256
§ Spring, plunger tension ...	582012	582012	—	—
§ Spring, locking	582023	582023	—	—
§ Stop, rubber	582090	582090	531674	531674

MIRRORS	A70 (all models)	'Princess' Saloon (DS6) and Limousine (DM4)	'Princess' Saloon (DS5) and Touring Limousine (DM5)	Hire Car (FL1)	2, 3 and 5 ton Trucks Series II	Ambulance and Hearse
Part No.	62043A	62047A	62060A	620128	62521D	62015A
Model	583/92A	573	573A	160/UMB2	540	575/85
Detailed Parts						
§ Glass	620836	620719	621725	620761	620508	—
§ Bracket	620891	—	—	580884	—	—

§ Recommended spares for stock.


STEERING COLUMN CONTROLS

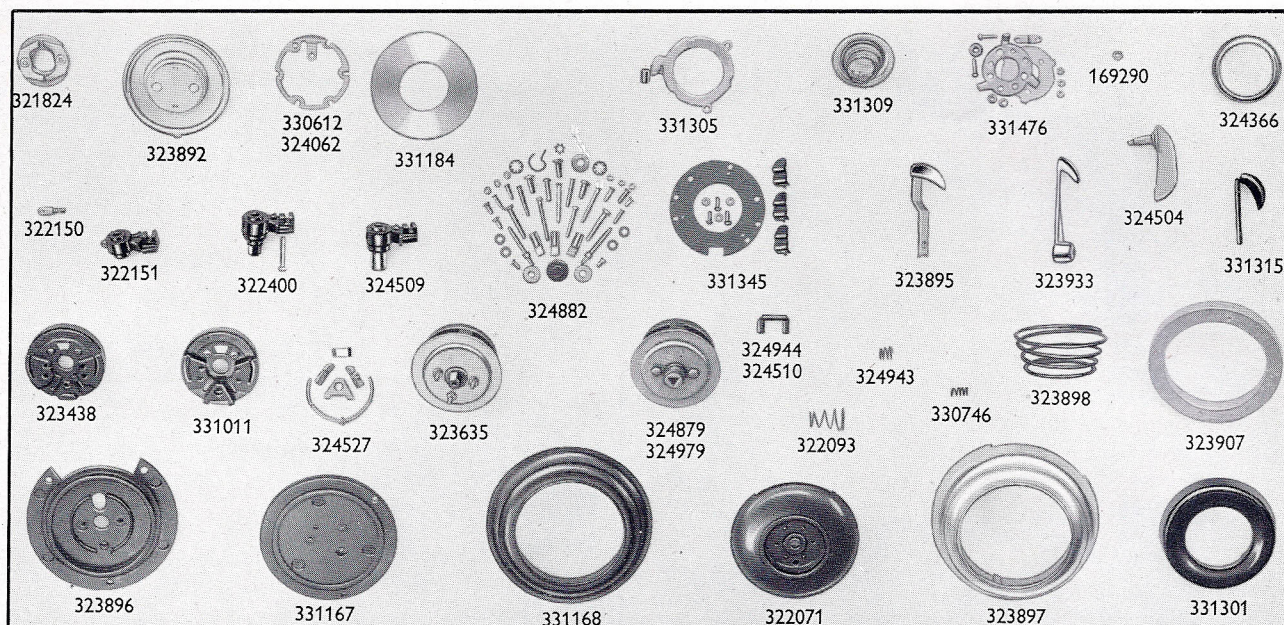

STEERING COLUMN CONTROLS	A30 (all models)	A40 and A50 'Cambridge'	A40 'Countryman', Van and Pick-up Truck	A70 (all models)	A90 'Westminster'
Part No.	*32915A	*32919B	*32853F	*32854J	*32946D
Model	CC5	CC3	CC3	CC2	CC3
Detailed Parts					
(1) §Top cover assembly	—	—	—	—	—
(2) Top cover moulding	331301	331168	323897	—	331168
(3) §Horn ring and contacts	—	—	—	323274	—
(4) §Horn push	—	—	—	—	—
(5) Ring, horn push retaining	—	—	—	—	—
(6) §Spring, horn push	—	330746	323898	—	330746
(7) §Contact assembly, horn push	—	331476	321824	—	331476
(8) Contact plate, horn push	†331309	331184	323892	—	331184
(9) Cushion, horn ring	—	—	—	324944	—
(10) Spring, return	—	—	—	324943	—
(11) Spring, rubber, return	—	—	—	—	—
(12) §Switch, trafficator	—	—	—	323635	—
(13) Base, trafficator switch	—	—	323438	323438	—
(14) §Lever, trafficator switch	—	—	323895	323933	—
(15) Rotor switch	—	—	—	322400	—
(16) Rotor and plunger	—	—	322151	—	—
(17) § Plunger, rotor	—	—	322150	322150	—
(18) §Cam, pawls and springs	—	—	324527	324527	—
(19) Connector, earth	—	—	324062	—	—
(20) Contact plate and peg	†331305	—	—	—	—
(21) Set of fixing parts	331345	—	—	—	—
(22) Base with connectors, top cover	—	—	—	—	—
(23) Base moulding, top cover	—	331167	323896	—	331167
(24) §Nut, 4 B.A., location pin	—	—	—	169290	—
(25) Connector, cable	—	—	900269	—	—
(26) Sundry parts, set	—	324882	324882	324882	324882
<i>The following parts are serviced by the Vehicle Manufacturer.</i>					
(27) Top cover assembly	32915A	331477	322397	—	331477
(28) Horn push	331306	331197	323890	—	331197
(29) Stator plate, retaining plate and sleeve	—	—	324869	—	—
(30) Stator tube and plate	—	331173	—	—	331531
(31) Stator tube	—	—	323893	323939	—
(32) Striker ring	—	—	324536	324536	—
(33) Motif	—	—	—	323928	—
(34) Horn push cover plate	—	—	—	—	—
(35) Stator plate, retaining plate, sleeve and horn ring bracket	—	—	—	331443	—
(36) Cable	—	861653	860233	860233	861777

* Complete Control serviced by the Vehicle Manufacturer. † Top contact with spring. ‡ Bottom contact. § Recommended spares for stock.

STEERING COLUMN CONTROLS

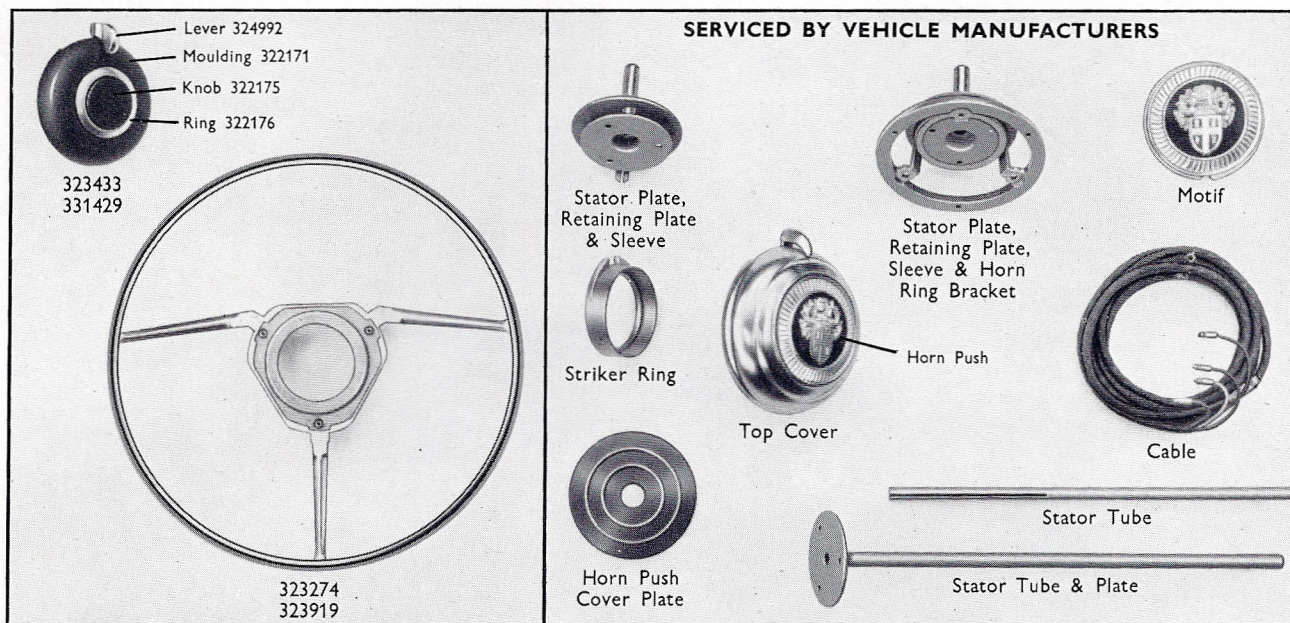


Austin-Healey '100'	'Princess' (all models)		Ambulance (DAI) and Hearse (DHI)		Hire Car, left hand drive (FLI)	Hire Car, right hand drive (FLI) and Taxi (FX3)
	Right hand drive	Left hand drive	Right hand drive	Left hand drive		
*32918A CCI	*32747N CC2	*32776K CC2	*32837F CC2	*32838F CC2	*32817J CC1	*32709F CC1
331429	—	—	—	—	323433	323433 (1)
322171	—	—	—	—	322171	322171 (2)
—	323919	323919	323919	323919	—	— (3)
322175	—	—	—	—	322175	322175 (4)
322176	—	—	—	—	322176	322176 (5)
322093	—	—	—	—	322093	322093 (6)
321824	—	—	—	—	321824	321824 (7)
—	—	—	—	—	—	— (8)
—	324510	324510	324510	324510	—	— (9)
—	—	—	—	—	—	— (10)
—	323907	323907	323907	323907	—	— (11)
—	324979	324979	324879	324879	—	— (12)
331011	323438	323438	323438	323438	323438	323438 (13)
331315	324504	324504	324504	324504	324992	324992 (14)
—	324509	324509	324509	324509	—	— (15)
322151	—	—	—	—	322151	322151 (16)
322150	322150	322150	322150	322150	322150	322150 (17)
324527	324527	324527	324527	324527	324527	324527 (18)
330612	—	—	—	—	330612	330612 (19)
—	—	—	—	—	—	— (20)
—	—	—	—	—	—	— (21)
—	—	—	—	—	—	— (22)
—	—	—	—	—	—	— (23)
—	—	—	—	—	—	— (24)
324882	324882	900269 324882	324882	900269 324882	324882	900269 324882 (25)
—	—	—	—	—	—	— (26)
—	—	—	—	—	—	— (27)
—	—	—	—	—	—	— (28)
—	—	—	—	—	—	— (29)
324734	—	—	—	—	324828	323996 (30)
—	324093	324228	324093	324228	—	— (31)
324536	324536	324536	324536	324536	324536	324536 (32)
—	—	—	—	—	—	— (33)
—	324314	324314	324314	324314	—	— (34)
—	—	—	—	—	—	— (35)
861561	324978 858256	324978 858719	324978 860005	324978 860006	859508	851850 (36)

* Complete Control serviced by the Vehicle Manufacturer.

§ Recommended spares for stock.

SWITCHES

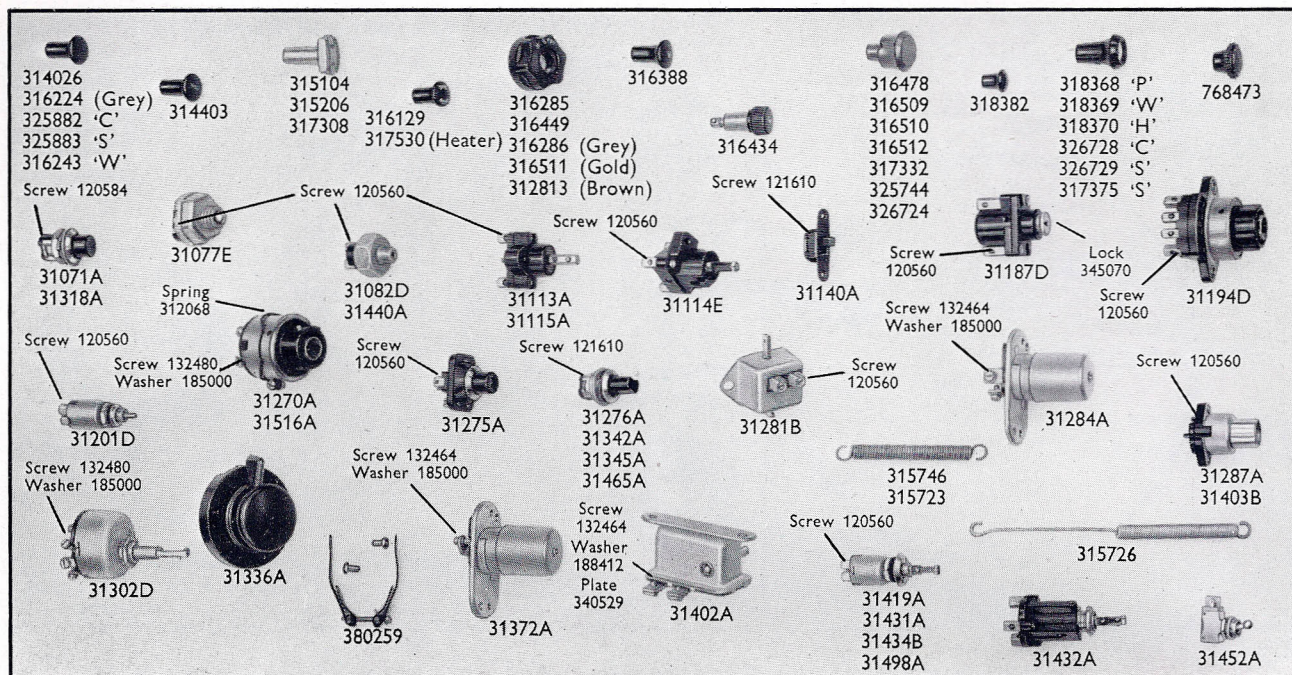

SWITCHES	Starting Motor, Solenoid Operating	Interrupter (Overdrive) and Reverse Lamp	Stop Lamp	Heater, Panel, Reading Lamp and Windshield Wiper	Lighting and Foglamp	Starting Motor, Solenoid Operating	Panel	Ignition	Lighting and Ignition
Part No. Model	31071A SS5	31077E SS10-I	31082D HL2	31113A PS16	31114E PPG2	31115A SS8	31140A IOP	31187D SS5	31194D PRS2
Detailed Parts §Screw, terminal Lock	I20584 —	I20560 —	I20560 —	I20560 —	I20560 —	I20560 —	I20610 —	I20560 345070	I20560 —


SWITCHES	Heater, Foglamp, Map Reading, Panel and Windshield Wiper	Lighting and Ignition or Main	Interior Light	Convoy Light and Panel	Stop Lamp	Dipper	Ignition	Windshield Wiper	Starting Motor, Solenoid Operating
Part No. Model	31201D PS7-1	31270A PRS3	31275A PS9	31276A PS6	31281B 54C	31284A FS22-1	31287A S45	31302D PRS5	31318A SS5
Detailed Parts									
\$Screw, terminal	120560	132480	120560	121610	120560	132464	120560	132480	120584
\$Washer, terminal	—	185000	—	—	—	185000	—	185000	—
Spring assembly, fixing ...	—	312068	—	—	—	—	—	—	—

SWITCHES	Dipper	Panel	Windshield Wiper	Dipper	Throttle	Ignition	Heater, Panel and Windshield Wiper	Windshield Wiper	Lighting
Part No. Model	31336A MS6	31342A PS6	31345A PS6	31372A FS22-1	31402A RTS1	31403B S45	31419A PS7-2	31431A PS7-2	31432A PPG1
Detailed Parts									
Screw, terminal	124300	121610	121610	132464	132464	120560	120560	120560	120560
Washer, terminal	—	—	—	185000	188412	—	—	—	—
Screw, base and cap fixing ...	136410	—	—	—	—	—	—	—	—
Clip	380259	—	—	—	—	—	—	—	—
Plate, locking, terminal ...	—	—	—	—	340529	—	—	—	—

(FOR VEHICLE APPLICATION SEE EQUIPMENT SPECIFICATIONS PAGES 4 – 6).

§ Recommended spares for stock.

SWITCHES

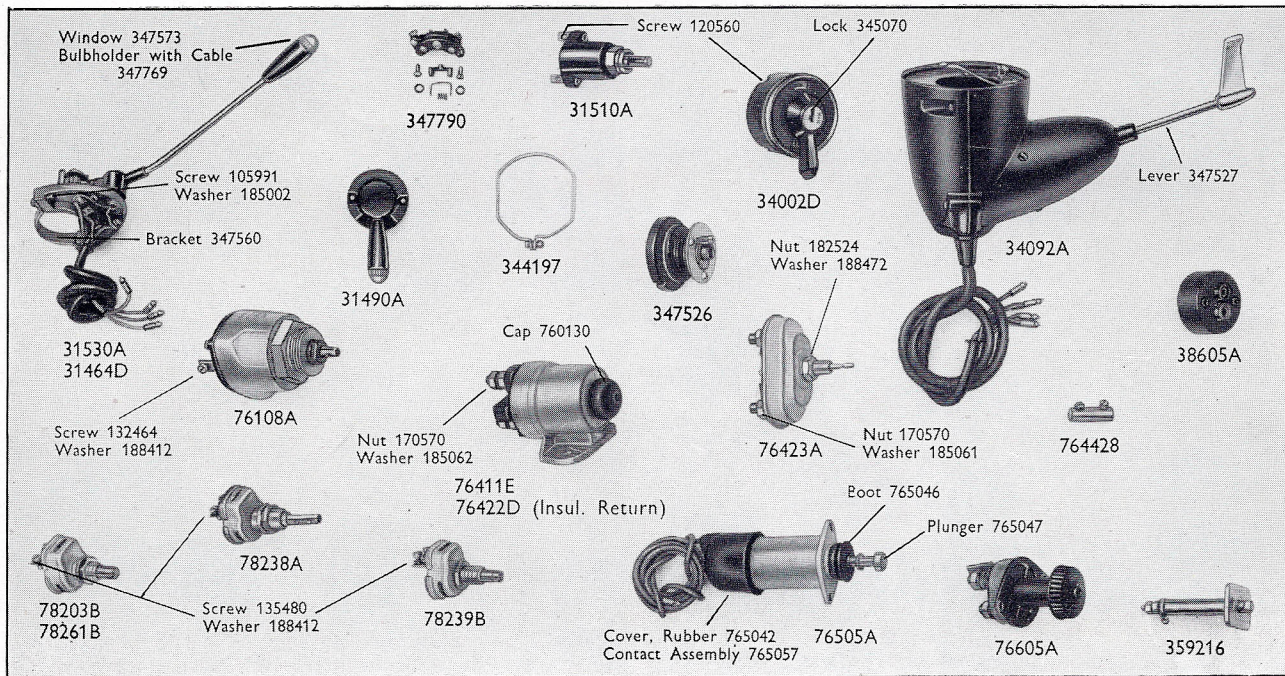


SWITCHES	Windshield Wiper	Stop Lamp	Trafficator	Heater	Trafficator	Heater, Panel and Windshield Wiper	Starting Motor, Solenoid Operating	Lighting and Ignition	Flasher
Part No. Model	31434B PS7-2	31440A HL2	31464D SC82	31465A PS6	31490A 8SA	31498A PS7-2	31510A SS9	31516A PRS3	31530A SC82
Detailed Parts									
§Screw, terminal	120560	120560	—	121610	—	120560	120560	132480	—
§Washer, terminal	—	—	—	—	—	—	—	185000	—
§Window, bulb	—	—	347573	—	347573	—	—	—	347573
§Bulb	—	—	280	—	280	—	—	—	280
§Bulb holder with cable	—	—	347769	—	—	—	—	—	347769
§Contact assembly	—	—	347790	—	—	—	—	—	347790
Bracket, fixing	—	—	347560	—	—	—	—	—	347560
Screw, bracket fixing	—	—	105991	—	—	—	—	—	105991
§Washer, bracket fixing screw	—	—	185002	—	—	—	—	—	185002
Spring assembly, fixing	—	—	—	—	—	—	—	312068	—

SWITCHES	Lighting and Ignition or Main	Lighting	Centrifugal	Solenoid, Starting Motor	Solenoid, Starting Motor	Starting Motor	Transmission Gear Solenoid	Heater	Panel	Heater	Heater
Part No. Model	34002D PLC6	34092A CRS3	76108A OCSI	76411E ST950	76422D ST950	76423A ST19-2	76505A TGS1	78203B CHRI	78238B CHRI	78239A CHRI	78261B CHRI
Detailed Parts											
§Screw, terminal	120560	—	132464	—	—	—	—	135480	135480	135480	135480
§Washer, terminal	—	—	188412	185022	185022	185061	—	188412	188412	188412	188412
Spring assembly, fixing	344197	—	—	—	—	—	—	—	—	—	—
Lock	345070	—	—	—	—	—	—	—	—	—	—
Lever	—	347527	—	—	—	—	—	—	—	—	—
Rotor	—	347526	—	—	—	—	—	—	—	—	—
§Nut, terminal	—	—	—	166043	166043	170570	—	—	—	—	—
Nut, contact screw	—	—	—	170570	170570	—	—	—	—	—	—
Washer, contact screw	—	—	—	185062	185062	—	—	—	—	—	—
§Cap, end, rubber	—	—	—	760130	760130	—	—	—	—	—	—
Nut, switch fixing	—	—	—	—	—	182524	—	—	—	—	—
Washer, switch fixing	—	—	—	—	—	188472	—	—	—	—	—
Cover assembly, contact	—	—	—	—	—	—	765057	—	—	—	—
Cover, rubber	—	—	—	—	—	—	765042	—	—	—	—
Boot, rubber	—	—	—	—	—	—	765046	—	—	—	—
Plunger	—	—	—	—	—	—	765047	—	—	—	—

(FOR VEHICLE APPLICATION SEE EQUIPMENT SPECIFICATIONS PAGES 4 - 6).

§ Recommended spares for stock.

HORNS

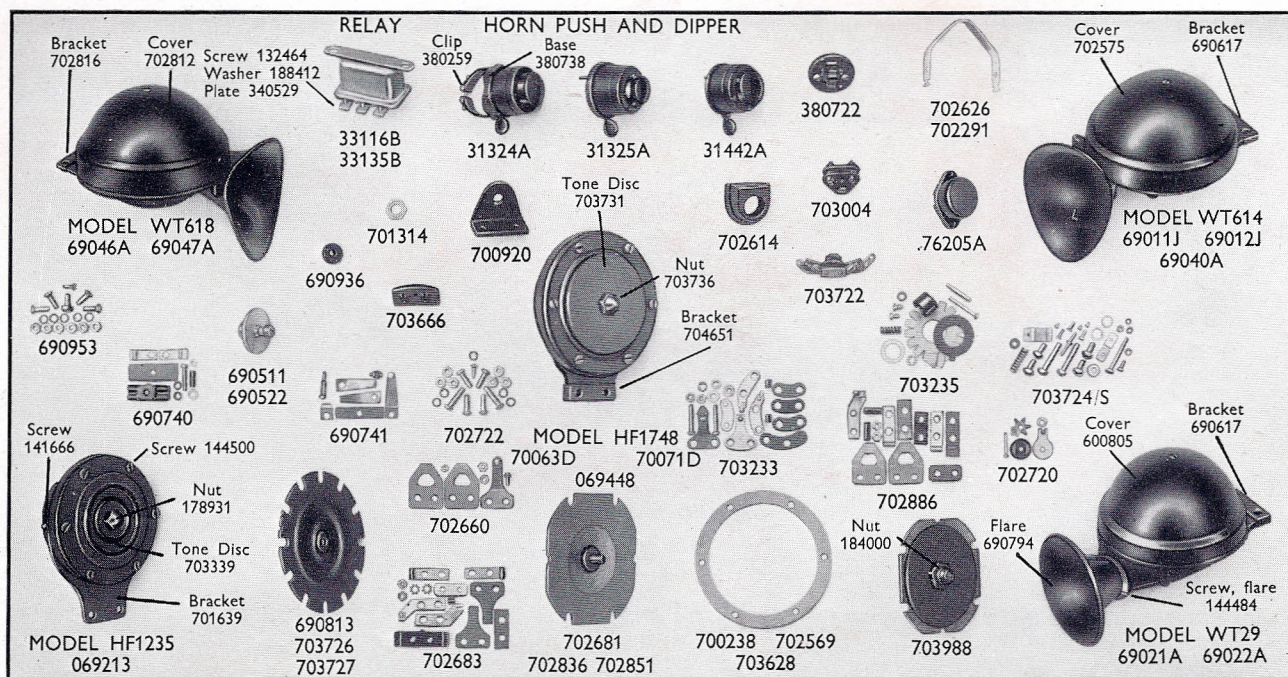

HORNS		A30 (all models), A40 Van (GV5), Pick-up Truck (GQU5), 'Champ' (Civilian), Coach (CXB) Series II, 2 and 5 ton Petrol Tanker and 2, 3 and 5 ton Trucks Series II	A40 and A50 'Cambridge' and Austin-Healey '100'		A40 'Countryman', A70 (all models) and Hire Car (FLI)		A40 and A50 'Cambridge' (later fitment) and A90 'Westminster'		Ambulance (DAI), Hearse (DHI) and 'Princess' (all models)		Taxi (FX3)	1½ ton 4x4 'Cargo' Truck
Part No.		Low Note	High Note	Low Note	High Note	Low Note	High Note	Low Note	High Note			
Model												
069213	HF1235	70063D	70071D	69011J	69012J	69046A	69047A	69021A	69022A	69040A	069448	
		HF1748	HF1748	WT614	WT614	WT618	WT618	WT29	WT29	WT614	HF1748	
Details Parts												
Bracket	701639	704651	704651	690617	690617	702816	702816	690617	690617	690617	704651	
Foot											700920	
Nut, tone disc	178931	703736	703736								703736	
Tone disc	703339	703731	703731								703736	
Screw, cover and bracket fixing (1" B.S.F.)	141666											
Screw, cover (1 B.A.)	144500											
Nut, diaphragm	184000	701314	701314									
Diaphragm	703988	703726	703727	702681	702681	702836	702851	690813	690813	702681	703134	
Armature assembly								690522	690511		703726	
Washer, diaphragm	700238	703628	703628	702569	702569			702569	702569	702569	703628	
Contact set	703233	703722	703722	702660	702660	702660	702660	690741	690741	702660	703722	
Cover				702575	702575	702812	702812	600805	600805	702575		
Grommet, rubber								690936	690936			
Support, cover				702626	702626	702626	702626	702291	702291	702626		
Terminal block	703004			702683	702683	*702886	*702886	690740	690740	702683		
Rubber seal, terminal plate		703666	703666									703666
Mute												
Resistance				702720	702720			702720	702720	702720		
Flare								690794	690794			
Screw, flare fixing								144484	144484			
Sundry parts, set	703235	703724/S	703724/S	702722	702722	702722	702722	690953	690953	702722	703724/S	

HORN RELAY	A70 (all models)	'Princess' (all models)	HORN PUSH AND DIPPER SWITCHES	'Champ' (Civilian)	1 and 1½ ton Vans	1½ ton 4×4 'Cargo' Truck, 2, 3 and 5 ton Trucks Series II and Coach (CXB) Series II
Part No.	33135B	33116B	Part No.	31325A	31442A	31324A
Model	SB40-I	SB40-I	Model	HD77	17	HD77
Detailed Parts			Detailed Parts			
\$Screw, terminal	132464	132464	Contact mount	380722	—	380722
\$Washer, terminal	188412	188412	Clip assembly, fixing	—	—	380259
Plate, locking, terminal	340529	340529	\$Screw, terminal	120610	124300	120610
			Base, die-cast	—	—	380738

* Incorporates resistance. § Recommended spares for stock.

This document was downloaded free from

www.iw1axr.eu/carmanual.htm

Questo documento è stato scaricato gratuitamente da

www.iw1axr.eu/auto.htm